SHARP SERVICE MANUAL

S21P120R-S100

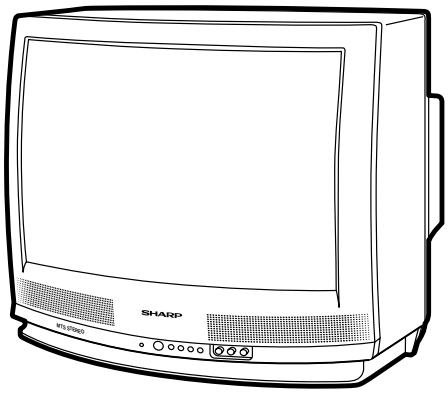

COLOR TELEVISION

Chassis No. SN-010

MODEL 20R-S100S

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

Page

- ELECTRICAL SPECIFICATIONS 1
- IMPORTANT SERVICE SAFETY PRECAUTION 2
- LOCATION OF USER'S CONTROL 4
- INSTALLATION AND SERVICE INSTRUCTIONS 5
- CHASSIS LAYOUT 11
- BLOCK DIAGRAM 12
- SCHEMATIC DIAGRAMS 13
- PRINTED WIRING BOARD ASSEMBLIES 19
- REPLACEMENT PARTS LIST 22
- PACKING OF THE SET 29

ELECTRICAL SPECIFICATIONS

POWER INPUT ..... AC 120 V, 60 Hz
POWER RATING ..... 74 W
PICTURE SIZE ..... 1,240cm^2 (192sq inch)
CONVERGENCE ..... Magnetic
SWEEP DEFLECTION ..... Magnetic
FOCUS ..... Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES
  Picture IF Carrier Frequency ..... 45.75 MHz
  Sound IF Carrier Frequency ..... 41.25 MHz
  Color Sub-Carrier Frequency ..... 42.17 MHz (Nominal)
AUDIO POWER
  OUTPUT RATING ..... 1.5W + 1.5W (at 10% distortion and Dual CH Operate)
SPEAKER
  SIZE ..... 8 cm (Round)
  VOICE COIL IMPEDANCE ..... 32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE
  VHF/UHF ..... 75 ohm Unbalanced
TUNING RANGES
  VHF-Channels ..... 2 thru 13
  UHF-Channels ..... 14 thru 69
  CATV Channels ..... 1 thru 125 (EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

IMPORTANT SERVICE SAFETY PRECAUTION

■ **Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:**

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.
   To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

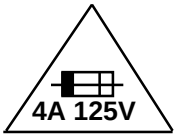

CAUTION: FOR CONTINUED PROTECTION AGAINST A RISK OF FIRE, REPLACE ONLY WITH SAME TYPE 4A-125V FUSE.

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
   It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
   The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
   Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)

Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.

- Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
- Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a 0.15µF capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
- Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.
- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor.
  AII checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)
  Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

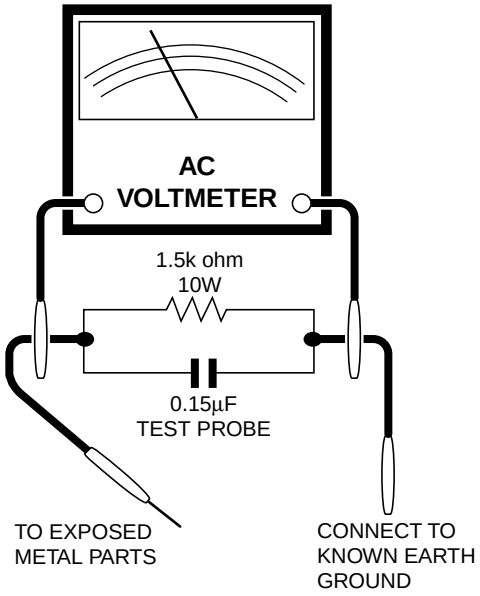

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.
Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.

For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

LOCATION OF USER'S CONTROL

Front Panel

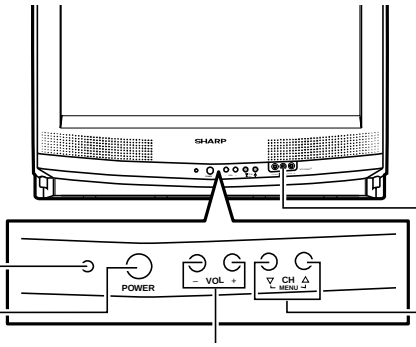

SENSOR AREA FOR REMOTE CONTROL

VIDEO/AUDIO IN TERMINALS

POWER
Press → On.
Press again → Off.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Press both at the same time to access the MAIN MENU screen.

Basic Remote Control Functions

POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

PERSONAL PREFERENCE
With the Personal Preference buttons, you can program your favorite programs by using the 4 categories A, B, C and D. The channels can be accessed quickly by using these buttons.

VOLUME UP/DOWN
(+) Increases sound.
(–) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

CATV/DVD-TV/VCR MODE SELECT SWITCH
In TV/VCR position, sends power and channel select commands (Channel up/down and Random Access buttons) to the TV and VCR control.
In CATV/DVD position, sends power and channel select commands to a cable TV converter and DVD control.

DVD/VCR CONTROL

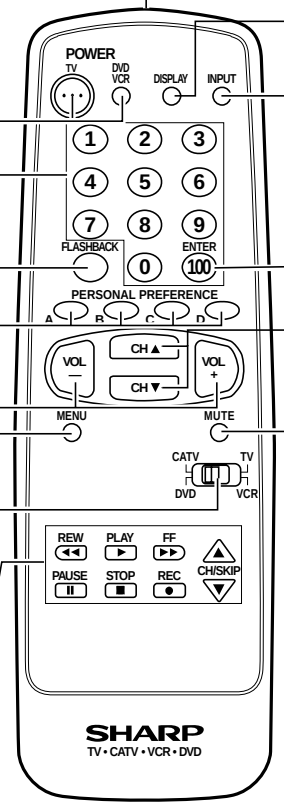

Infrared Transmitter Window

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INPUT
Press → Switch to external video INPUT mode.
Press again → Switch to TV mode.

ENTER
Used in some instances where a Cable Converter Box requires an "enter" command after selecting channels, when using the REMOTE KEYPAD button.

CHANNEL UP/DOWN
(▲) Selects next higher channel.
(▼) Selects next lower channel.
• Moves the " ⬍ " mark of the MENU screens.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

Note:

- The above shaded buttons on the Remote Control glow in the dark. To use the glow-in-the-dark display on the remote control, place it under a fluorescent light or other lighting.
- The phosphorescent material contains no radioactive or toxic material, so it is safe to use.
- The degree of illumination will vary depending on the strength of lighting used.
- The degree of illumination will decrease with time and depending on the temperature.
- The time needed to charge the phosphorescent display will vary depending on the surrounding lighting.
- Sunlight and fluorescent lighting are the most effective when charging the display.

INSTALLATION AND SERVICE INSTRUCTIONS

Note: (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
(2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads 22.2 ±1.5V.
5. Apply external 27.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S03" and Bus data "01" (Y-mute on).
4. The voltage should be approximately, 26.5kV (at zero beam).
   If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjusment is required.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.
Now, the TV set is switched on and enters the service mode.
To exit the service mode, turn the television off by pressing the power button.

1. Service mode.

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer control are in their proper (reset) position.

2. Service number selection.

In the service mode, you will see the window screen as window ①. There are 4 adjustment categories ②DEF, ③SIGNAL, ④FEATURE, ⑤FIX VALUE as show in **Figure A**.

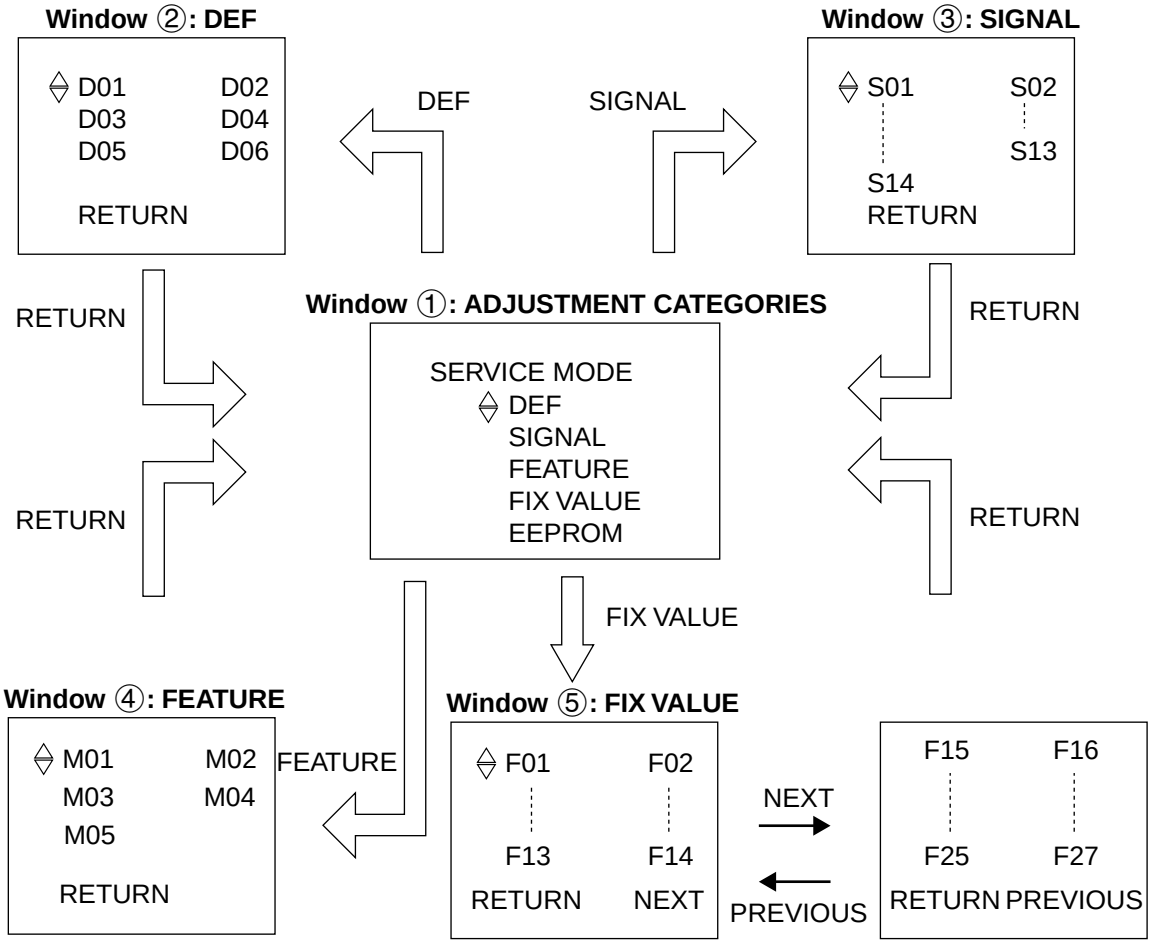

Figure A: ADJUSTMENT CATEGORIES

Press CH UP/DOWN button for selection and enter by VOL UP or VOL DOWN.
Press CH UP/DOWN button to select the adjustment item and VOL UP/DOWN to adjust the data number for each categories.
(OSD disturbance can be erased by R/C display key)
(Note: EEPROM - factory used only)

Below are the adjustments ranges and initial values for FIX VALUE category.

FIX VALUE

SERVICE POSITION	ADJUST ITEM	DATA		
		RANGE	INITIAL VALUE	(Hex)
F01	OPTION 1	00-FF	B3	B3
F02	OPTION 2	00-FF	07	05
F03	E-SAVE	00-FF	2A	2A
F04	TUNER SETUP	00, 01	00	00
F05	R-TONE RD	00-7F	03	03
F06	R-TONE BD	00-7F	7C	7C
F07	B-TONE RD	00-7F	00	00
F08	B-TONE BD	00-7F	04	04
F09	FM LEVEL	00-1F	16	16
F10	AFC GAIN	00, 01	00	00
F11	G DRIVE	00-0F	0F	0F
F12	FBT BLK SW	00, 01	01	01
F13	V COMP	00-07	07	07
F14	OSD CONT	00-03	01	01
F15	SHARPNESS	00-3F	0D	19
F16	FLT SYS	00-07	01	00
F17	KILLER OP	00-07	02	02
F18	PRE SHOOT	00-03	00	00
F19	CORING	00-07	07	04
F20	DC REST	00-03	02	02
F21	BS START	00-03	01	01
F22	BS GAIN	00-03	01	01
F23	ABL START	00-1F	00	00
F24	R/B ANGLE	00-0F	08	08
F25	H BLK R	00-07	02	03
F26	H BLK L	00-07	00	06
F27	C EXT/C BYPASS	00-07	05	00

Table - A

Below are the ranges and initial values for each adjustment and in each categories.

DEF

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
D01	H-PHASE	00-1F	0C	
D02	V-SIZE	00-7F	40	
D03	V-POSITION	00-3F	20	Must be "20"
D04	CC-POSITION	00-FF	1A	
D05	V-LINEARITY	00-1F	18	Must be "12"
D06	V-S-CORRECTION	00-1F	0C	Must be "0F"

Table - B

SIGNAL

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
S01	RF AGC	00-3F	14	
S02	VIDEO LEVEL	00-07	03	
S03	Y-MUTE	00-03	00	"01": Y-MUTE, "02:V-STOP & Y-MUTE "03": Activate color killer circuit.
S04	SUB BIAS	00-7F	30	Must be "30"
S05	R-BIAS	00-FF	00	
S06	G-BIAS	00-FF	00	
S07	B-BIAS	00-FF	00	
S08	R-DRIVE	00-7F	53	
S09	B-DRIVE	00-7F	53	
S10	CONTRAST	00-7F	5A	
S11	TINT	00-7F	40	
S12	COLOR	00-7F	40	
S13	BRIGHTNESS	00-7F	40	
S14	BRIGHT2	00-7F	40	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - C

FEATURE

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
M01	MS LEVEL	00-0F	0A	
M02	MTS-VCO	00-3F	20	
M03	FILTER	00-3F	1C	
M04	LOW SEPARATION	00-3F	20	
M05	HIGH SEPARATION	00-3F	1B	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - D

Holding down both the Vol-up/Ch-down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2102 (IC2101).

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2102 (IC2101).
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2102 (IC2101)	X		Holding down both the Vol-up/Ch-down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2102 (IC2101).
CRT	X		Adjust items related to picture tube only.

Table - E

	R2101	R2102	R2103	R2104
If using IC2101	○	○	–	–
If using IC2102	–	–	○	○

Table - F

■ SERVICE ADJUSTMENT

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S01".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.
   Note: You have to exit the service mode first to select another channel.

Video Level (TV Det Video Level) Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S02".
3. Set the data value to "02" first, then adjust the data in ranges 02 ±2 step to obtain a normal contrast level.

Screen Adjustment

1. Connect to oscilloscope probe between TP855 and ground of the CRT unit.
2. Receive a good local channel.
3. Enter the service mode Signal category and set the service adjustment "S04" to step 30. Then select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum level. (record the original data first). You may skip this step, if you selected a B/W picture or monoscope pattern. Set also the "S05/S06/S07" data to minimum level.
4. Select the service adjustment "S03" and set the data value to "01" to turn off the luminance signal (Y-mute).
5. Select the service adjustment "S14" and adjust the data value to obtain 2.35 volts as shown in **Figure B**.
6. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustment "S05" red, "S06" green, "S07" blue to obtain a good grey scale with normal white at low brightness level.
8. Select the service a adjustment "S03" and reset data to "00". Select the service adjustment "S12" and reset data to obtain normal color level.
9. Remove probe and reset the master screen control to obtain normal brightness range.

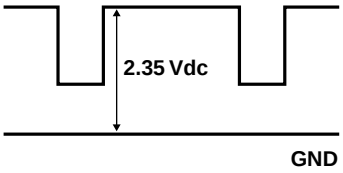

Figure B: WAVEFORM FOR SCREEN ADJUSTMENT

White Balance Adjustment

1. Receive a good local channel.
2. Select the service adjustment "S12" and set the data value to "00" to set the color level to the minimun. You may skip this step, if you selected a B/W picture or monoscope.
3. Alternately adjust the service adjustment data of "S08" and "S09" until a good grey scale with normal white is obtained.
4. Select the service adjustment "S12" and reset data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set the customer tint control to the center of it's range.
3. Enter the service mode and select the service adjustment "S11".
4. Adjust "S11" data value to obtain normal fresh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position.
3. Enter the service mode and select the service adjustment "S12".
4. Adjust "S12" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S13".
4. Adjust "S13" data value to obtain normal brightness level.

Vertical-Size, V-Linearity and V-S Correction Adjustments

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D02" for Vertical Size, "D05" for V-Linearity and "D06" for V-S Correction Adjustment.
3. Set in order "D05" for V-Linearity, "D06" for V-S Correction and set the data to get the best linearity.
4. Then adjust "D02" data until it become a proper vertical size.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D01".
3. Adjust "D01" data value to center the picture.

Vertical-Phase Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D03".
3. Adjust "D03" bus data to get the most acceptable vertical position.
   Note: The step range is 20 (032) ±10 steps.

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D04".
3. A black text box will appear on the screen. (see **Figure C**. below)
4. Adjust "D04" data value to balance the text box position in the center. (A=B).

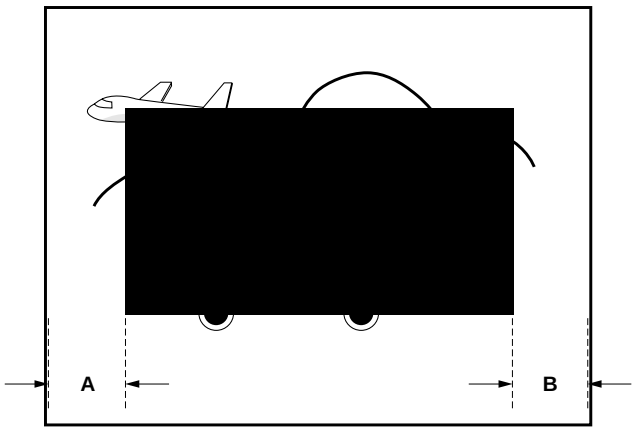

Figure C.

■ MTS ADJUSTMENT

MTS Level Adjustment

1. Feed the following monaural signal to pin (14) of IC3001.
   Monaural signal : 300Hz, 245mVrms
2. Connect the rms voltmeter to pin (39) of IC3001.
3. Enter the service mode and select the service adjustment "M01".
4. Adjust the data so that the rms voltmeter reads 490 ±10mVrms.

MTS VCO Adjustment

1. Keep the unit in no-signal state.
2. Connect the frequency counter to pin (39) of IC3001.
3. Connect a capacitor (100µF, 50V) in between positive(+) side of C3005 and ground.
4. Enter the service mode and select the service adjustment "M02"
5. Adjust the data so that the frequency counter reads 62.94 ±0.75kHz.

Filter Adjustment

1. Feed the following stereo pilot signal to pin (14) of IC3001 .
   Stereo pilot signal: 9.4kHz, 600mVrms.
2. Enter the service mode and select the service adjustment "M03".
3. Adjust the data at the point where "OK" appears on the screen. The "OK" represents the approximate center of the adjustable range of the data.

Separation Adjustment

1. Connect the rms voltmeter to pin (39) of IC3001.
2. Receive the following composite stereo signal 1.
   Composite stereo signal: 30% modulation, left channel only, noise reduction on, 300Hz
3. Enter the service mode and select the service adjustment "M04".
4. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
5. Receive the following composite stereo signal 2.
   Stereo signal: 30% modulation, left channel only, noise reduction on, 3kHz
6. Enter the service mode and select the service adjustment "M05".
7. Adjust the data until the AC voltage reading of the rms voltmeter is minimum.
8. Take the above steps 1 thru 7 again for fine adjustment.

CHASSIS LAYOUT

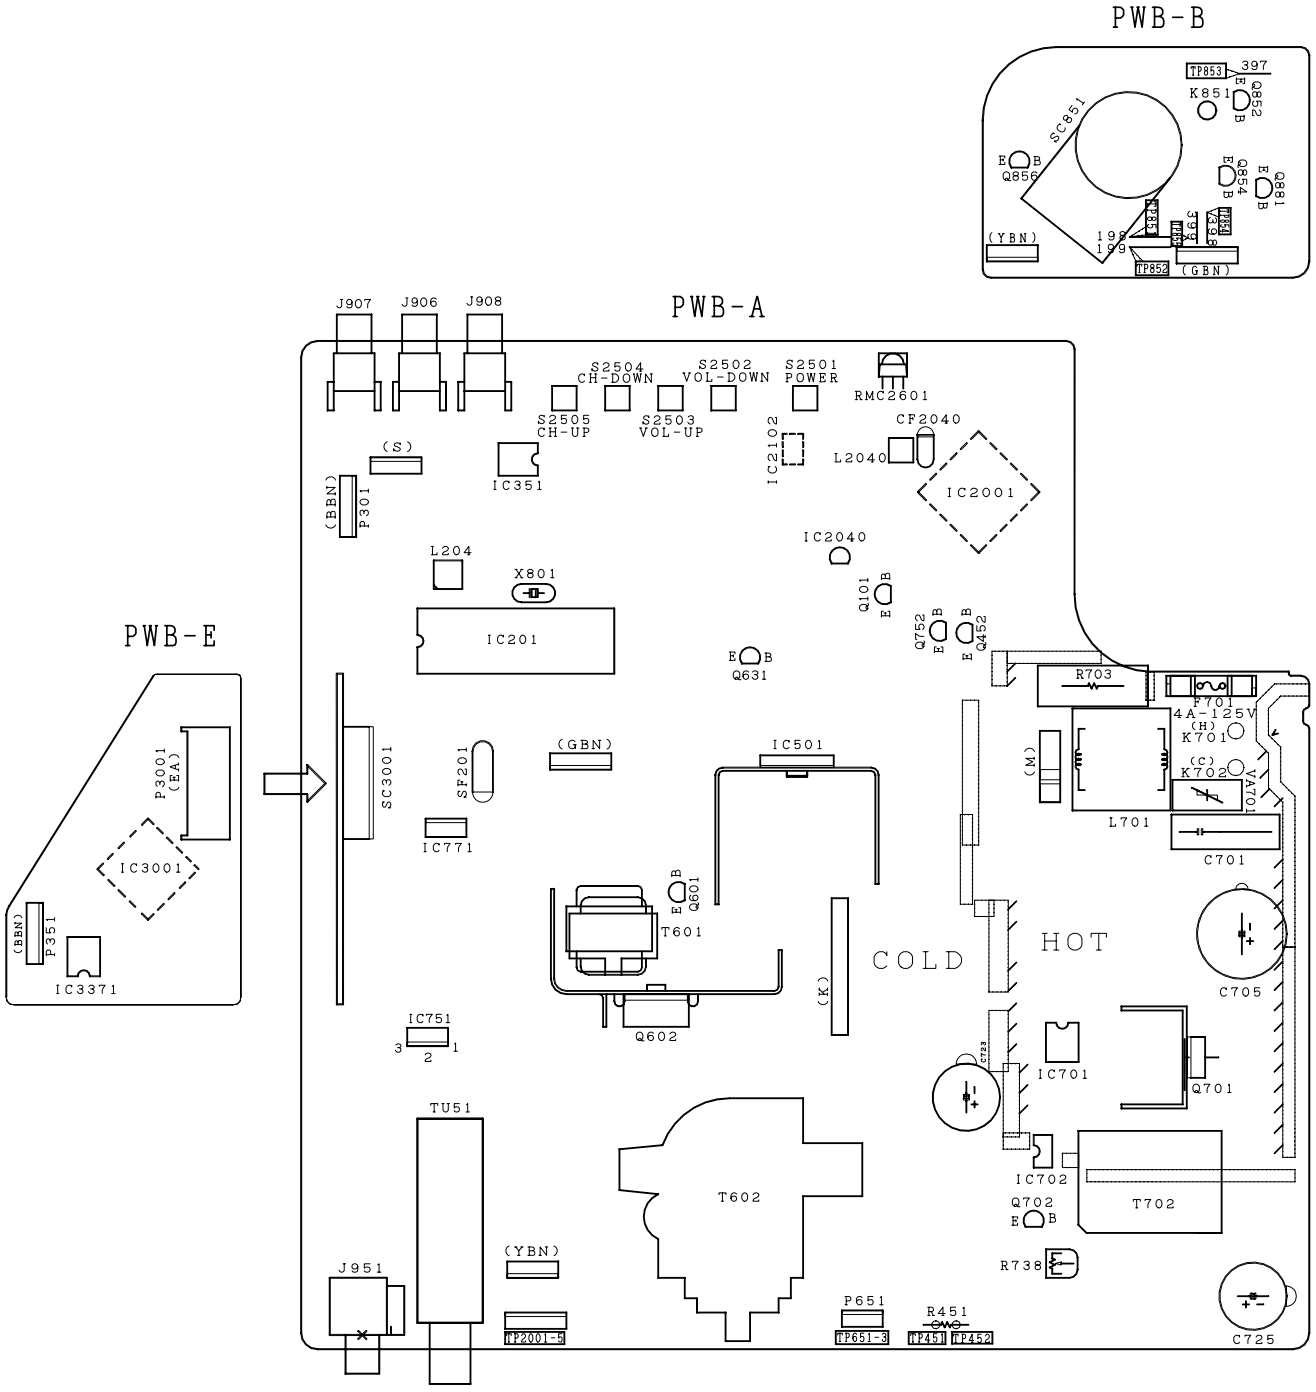

BLOCK DIAGRAM

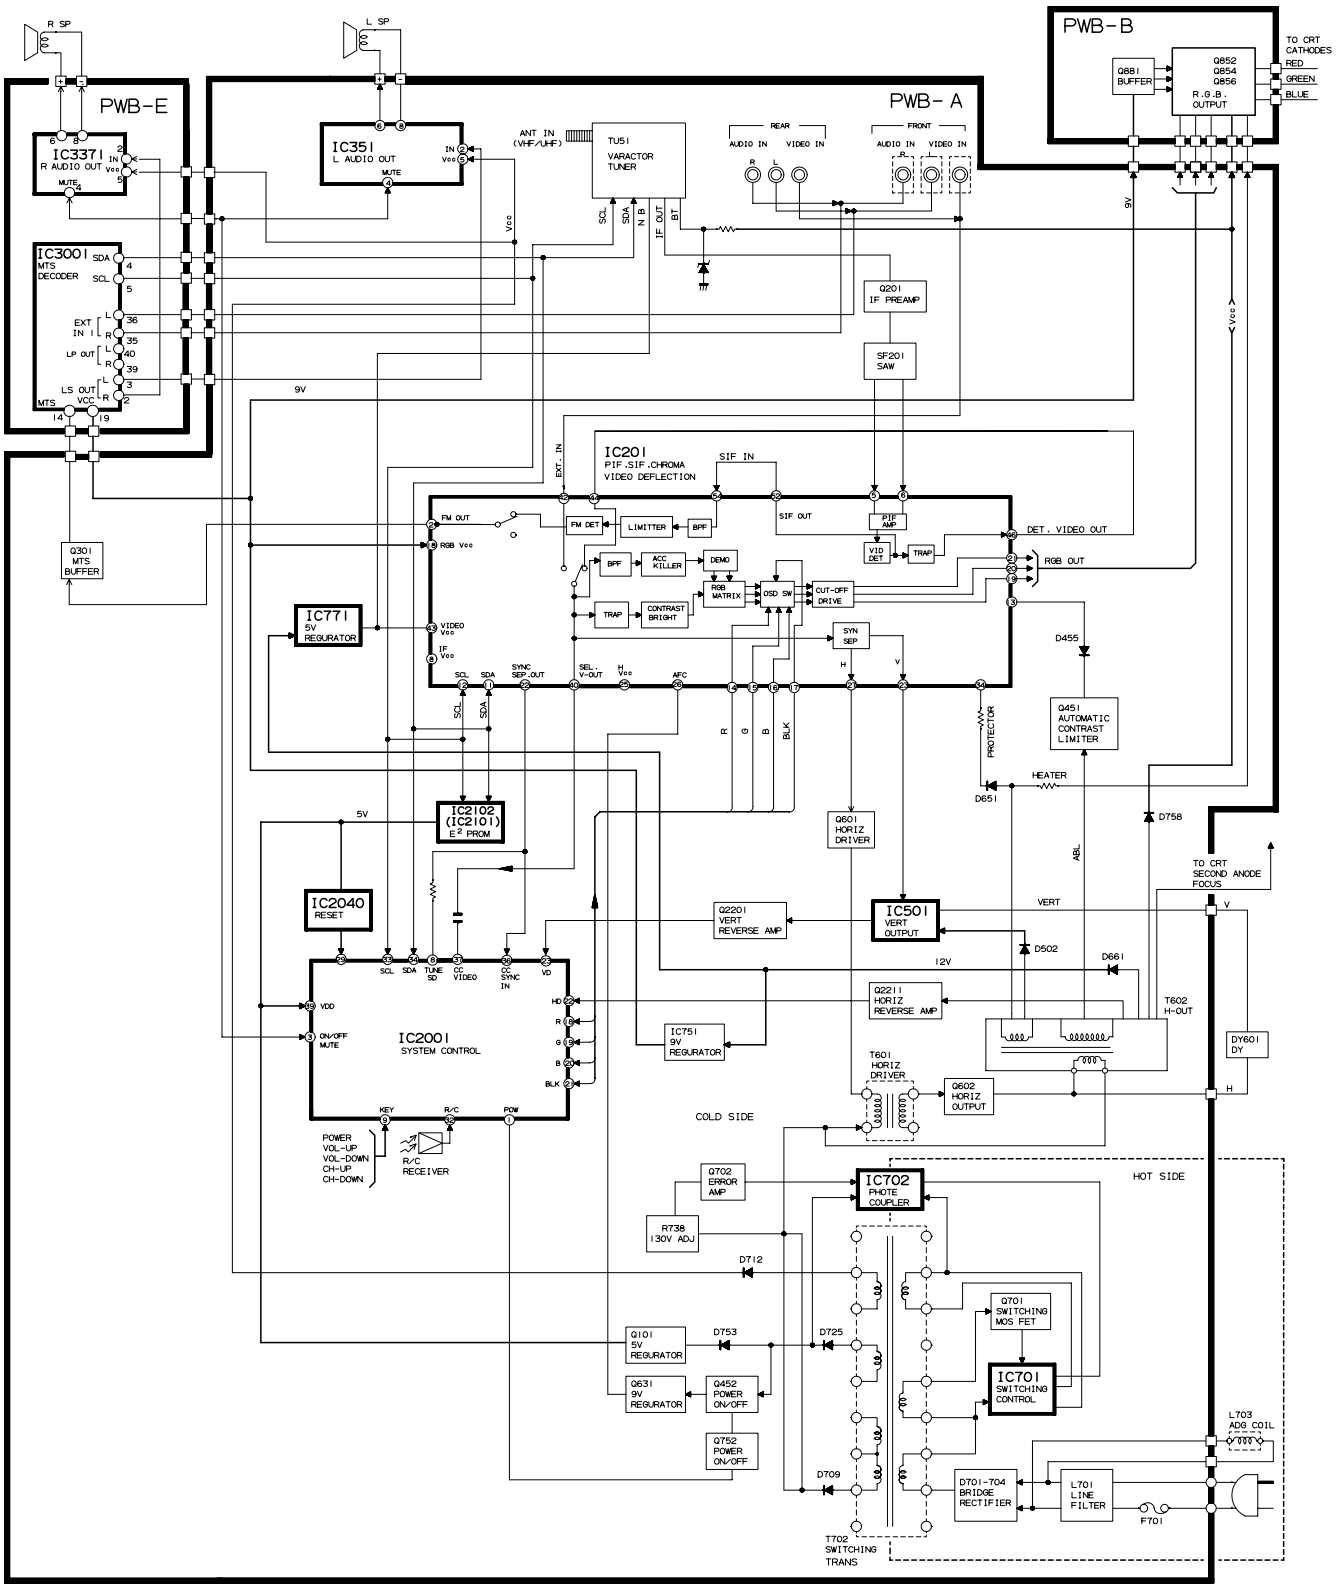

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. *The unit of resistance "ohm" is omitted. (K=kΩ=1000Ω, M=MΩ)*
2. *All resistors are 1/16 watt, unless otherwise noted.*
3. *All capacitors are μ F, unless otherwise noted. (P=pF=μμF)*
4. *(G) indicates ±2% tolerance may be used.*
5. *⏚ indicates line isolated ground.*

VOLTAGE MEASUREMENT CONDITIONS:

1. *All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.*
2. *All voltages measured with 1000μ V B & W or Color signal.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.*
2. *indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)*

⚠ *AND SHADED ( ) COMPONENTS = SAFETY RELATED PARTS.*
▲ *MARK= X-RAY RELATED PARTS.*

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.

WAVEFORMS

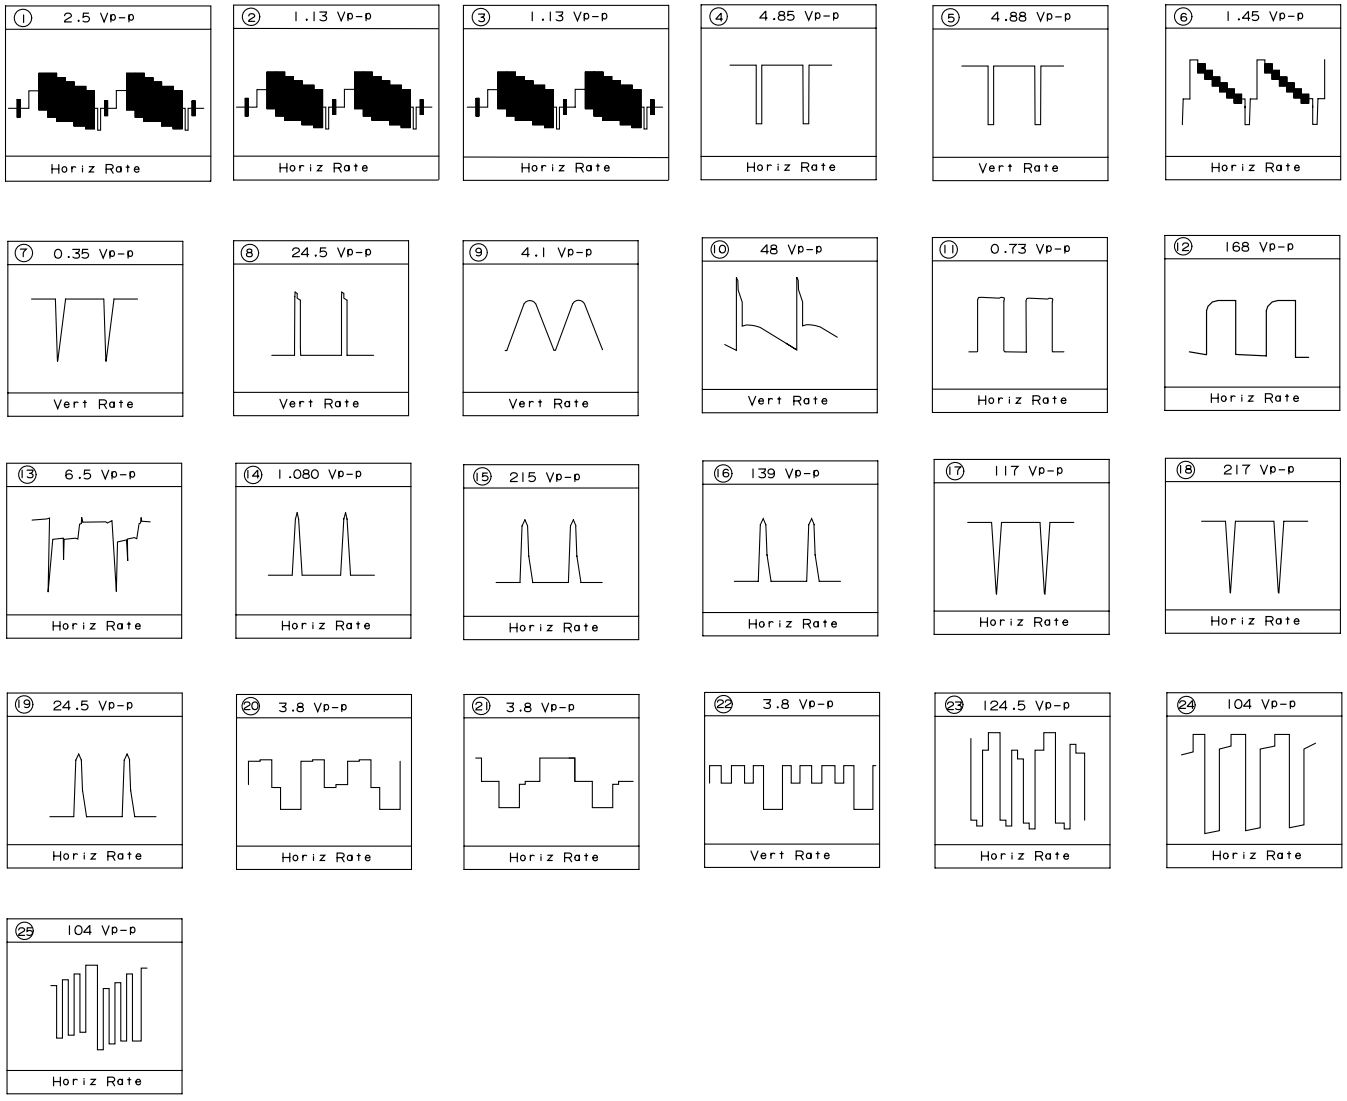

SCHEMATIC DIAGRAM: MAIN Unit

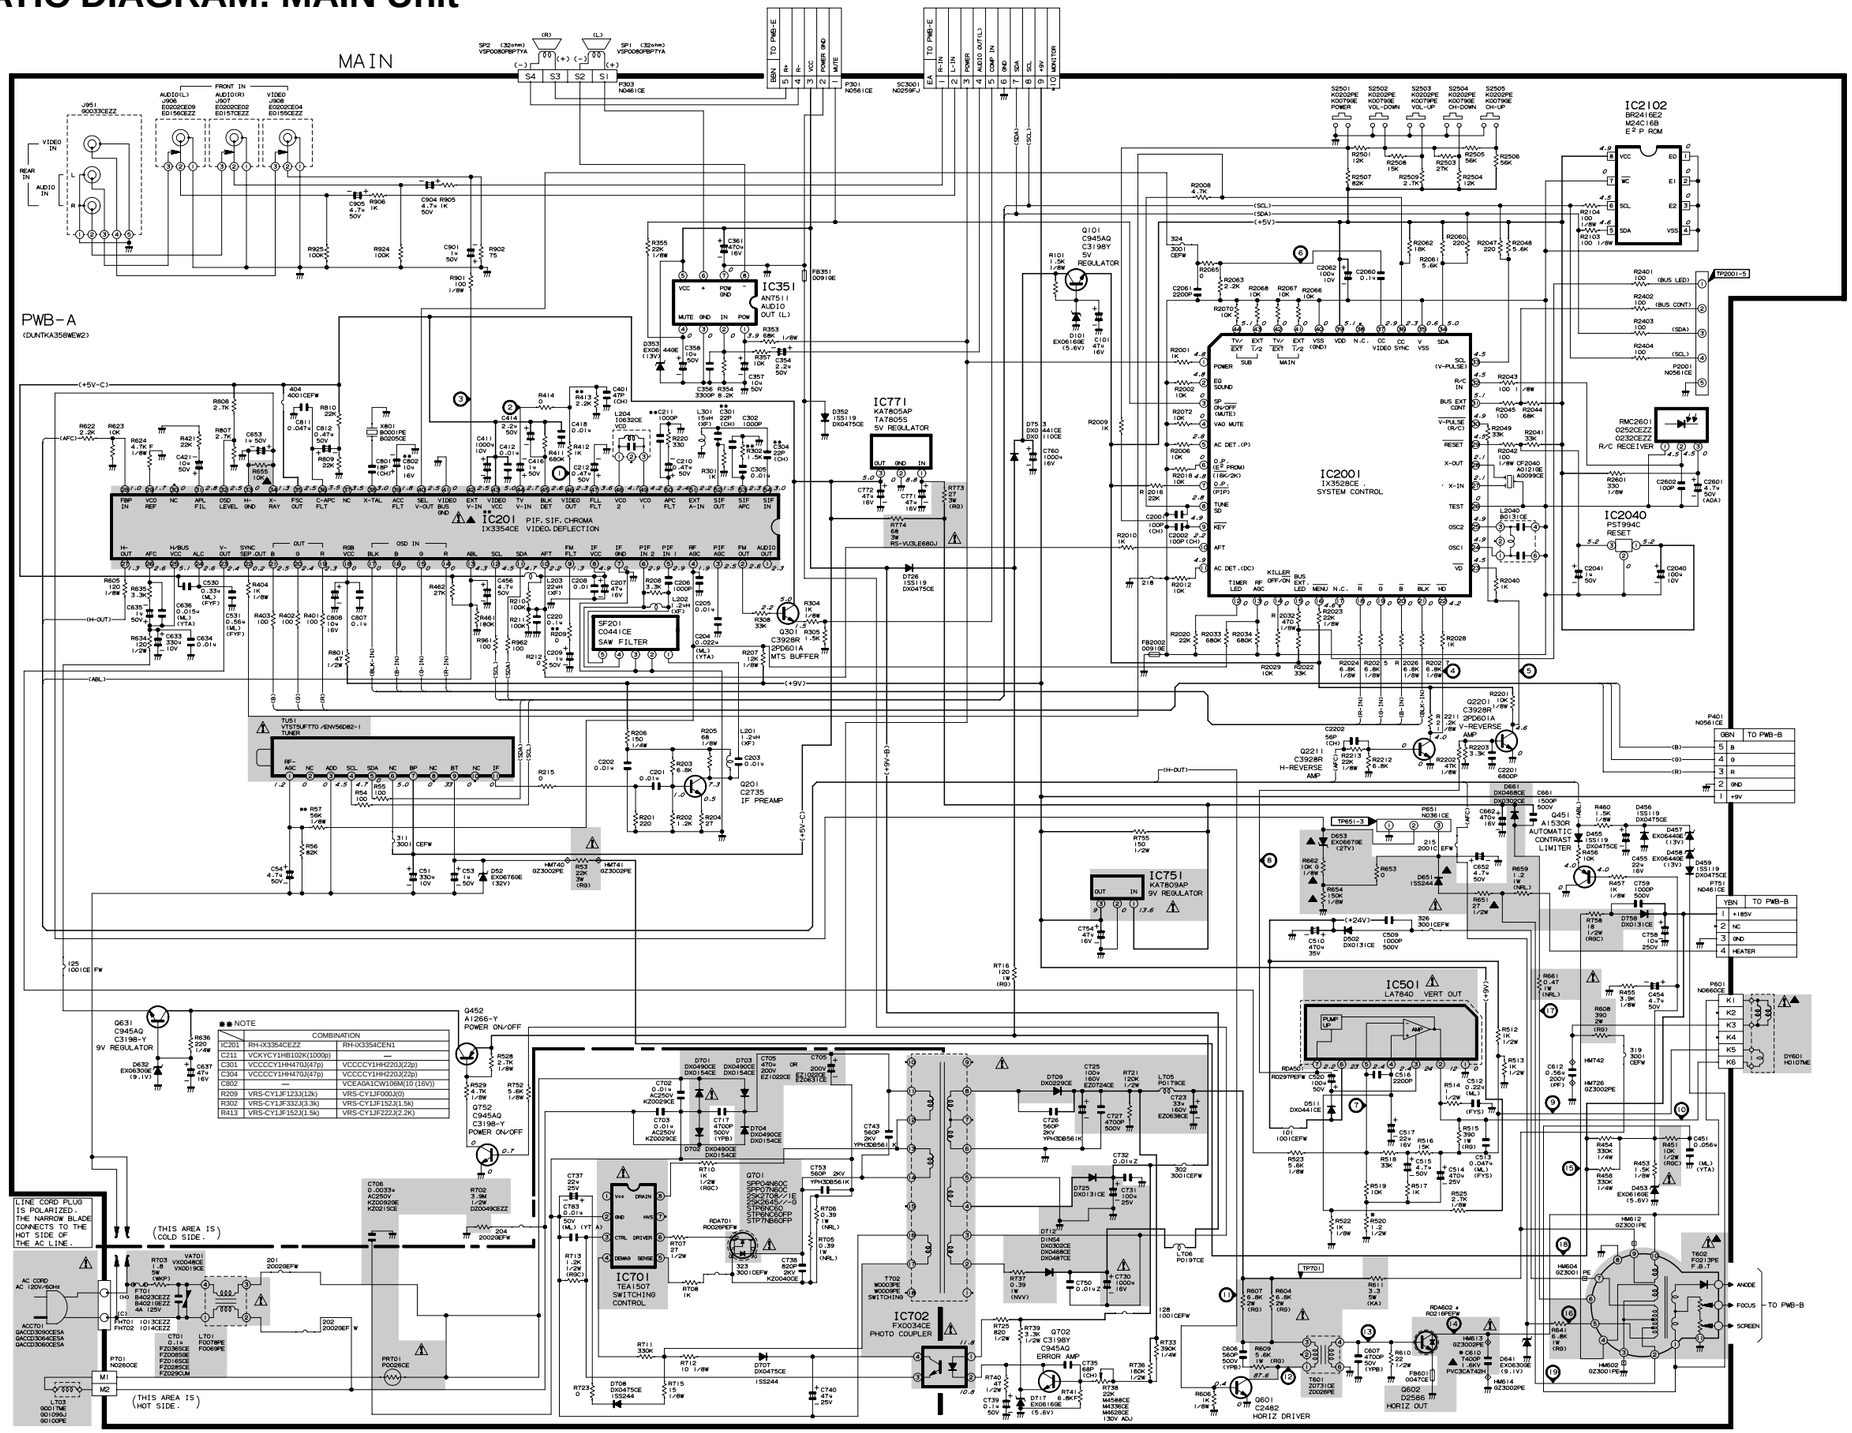
MAIN
PWB-A
(DUNTKA358WEW2)
IC201 PIF, SIF, CHROMA VIDEO, DEFLECTION
IC351 AN7511 AUDIO OUT (L)
IC771 KA7805AP TA7805S 5V REGULATOR
IC2001 IX3528CE . SYSTEM CONTROL
IC2102 BR24IE2 M24C16B E2P ROM
IC2040 PST994C RESET
IC701 TEA1507 SWITCHING CONTROL
IC702 FX0034CE PHOTO COUPLER
IC751 KA7809AP 9V REGULATOR
IC501 LA7840 VERT OUT
Q101 C945AQ C3198Y 5V REGULATOR
Q631 C945AQ C3198-Y 9V REGULATOR
Q752 C945AQ C3198-Y POWER ON-OFF
Q452 A1266-Y POWER ON-OFF
Q301 C3928R H-REVERSE AMP
Q2201 C3928R V-REVERSE AMP
Q601 C2482 HORIZ DRIVER
Q602 D2586 HORIZ OUT
Q701 SPP20N60C SPP20N60C SPW47N60C SPW24N60C STP8NB50FP STP7NB60FP
Q301 C3928R 2PD601A MTS BUFFER
Q201 C2735 IF PREAMP
Q501 C3928R 2PD601A V-REVERSE AMP
Q701 C945AQ C3198Y ERROR AMP
SF201 CO441CE SAW FILTER
TU51 VTS75UFT70 TUNER
T601 2073ICE
T602 P2013PE P-B-T
FRONT IN
REAR IN
VIDEO IN
AUDIO IN
PWB-B
TO PWB-E
TO PWB-A
TO PWB-B
TO PWB-B
TO PWB-B
TO PWB-B
SP2 (32ohm) VSP0080PSP7YA
SP1 (32ohm) VSP0080PSP7YA
P303 N0461CE
P301 N0561CE
SC3001 N0259FJ
P2001 N0561CE
P401 N0561CE
P501 N0660CE
P751 N0461CE
TP2001-5
TP501-3
TP701
RMC260I 0252CEZZ 0232CEZZ R/C RECEIVER
DY801 HD107ME
LINE CORD PLUG IS POLARIZED. THE NARROW BLADE CONNECTS TO THE HOT SIDE OF THE AC LINE.
(THIS AREA IS COLD SIDE.)
(THIS AREA IS HOT SIDE.)
AC CORD AC 120V/60Hz
(+5V-C)
(+9V)
(+9V-B)
(+24V)
(SCL)
(SDA)
(+5V)
(H-OUT)
(ABL)
(BLK-IN)
(G-IN)
(B-IN)
(R-IN)
NOTE
COMBINATION
RH-IX3354CEZZ
RH-IX3354CEN1
VCKYCY1HB102K(1000p)
VCCCCY1HH470J(47p)
VCCCCY1HH203J(22p)
VCEA0A1CW108M(10 (16V))
VRS-CY1JF223J(22k)
VRS-CY1JF123J(12k)
VRS-CY1JF332J(3.3k)
VRS-CY1JF152J(1.5k)
VRS-CY1JF153J(15k)
VRS-CY1JF222J(2.2K)
GBN
YBN
TO PWB-B
+185V
NC
GND
HEATER
ANODE
FOCUS
SCREEN
AUTOMATIC CONTRAST LIMITER
H-REVERSE AMP
V-REVERSE AMP
MTS BUFFER
IF PREAMP
SAW FILTER
ERROR AMP
HORIZ DRIVER
HORIZ OUT
VERT OUT
SYSTEM CONTROL
PIF, SIF, CHROMA VIDEO, DEFLECTION
SWITCHING CONTROL
PHOTO COUPLER
5V REGULATOR
9V REGULATOR
POWER ON-OFF
RESET
R/C RECEIVER
TUNER
SAW FILTER
MTS BUFFER
IF PREAMP
H-REVERSE AMP
V-REVERSE AMP
HORIZ DRIVER
HORIZ OUT
VERT OUT
SYSTEM CONTROL
PIF, SIF, CHROMA VIDEO, DEFLECTION
SWITCHING CONTROL
PHOTO COUPLER
5V REGULATOR
9V REGULATOR
POWER ON-OFF
RESET
R/C RECEIVER
TUNER
SAW FILTER
ERROR

SCHEMATIC DIAGRAM: MTS MODULE Unit

MTS MODULE

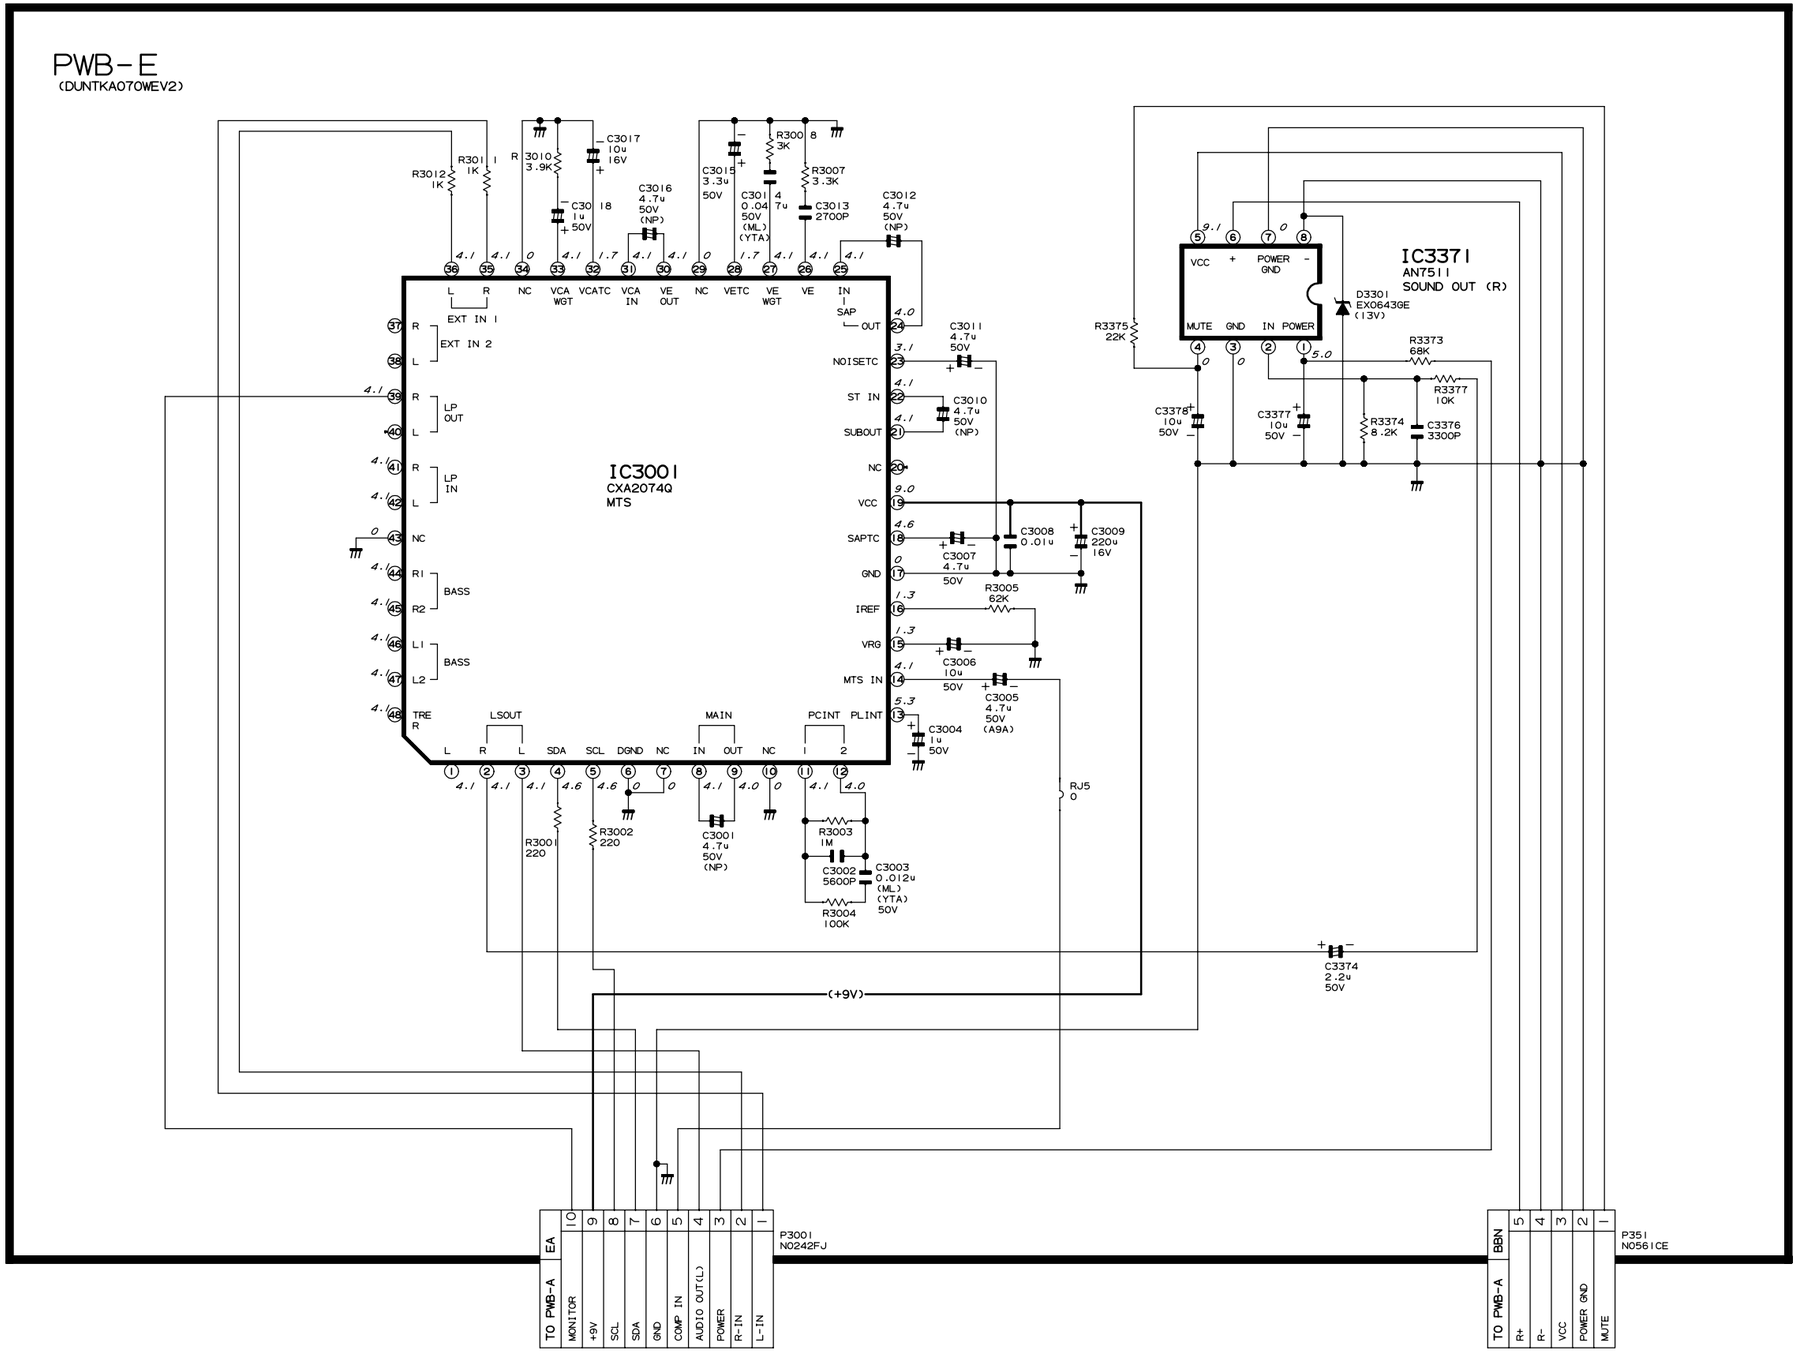

SCHEMATIC DIAGRAM: CRT Unit

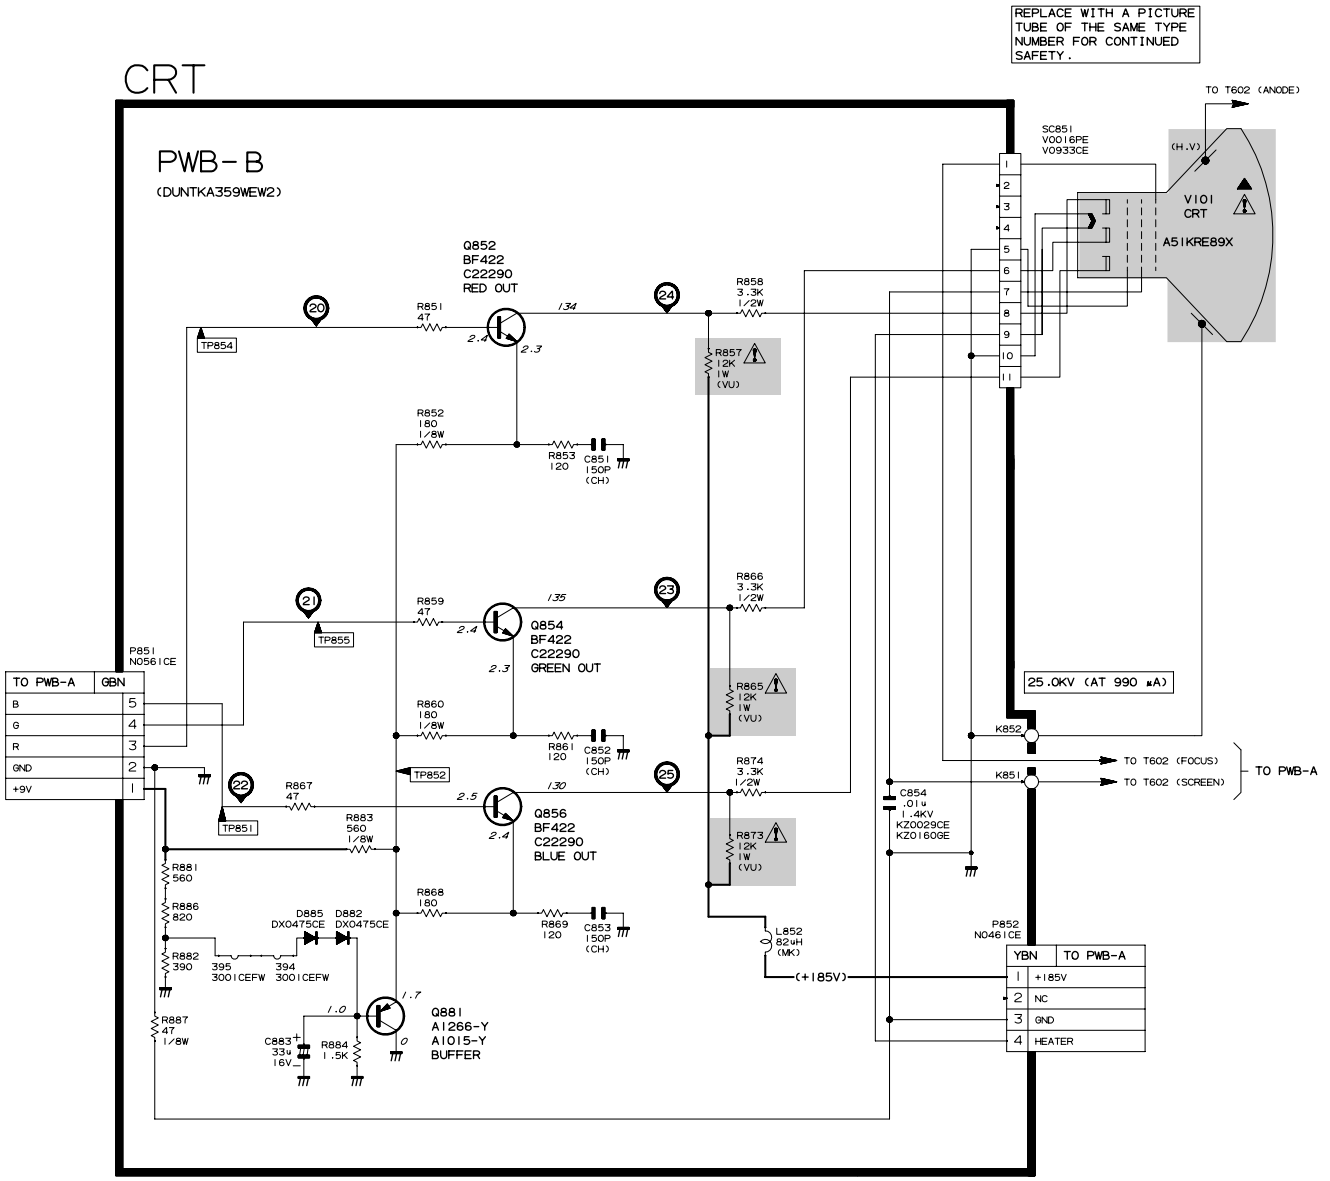

PRINTED WIRING BOARD ASSEMBLIES

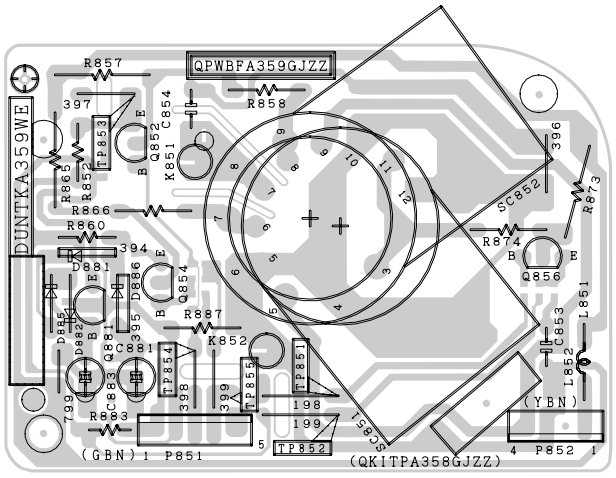

PWB-B: CRT Unit (Wiring Side)

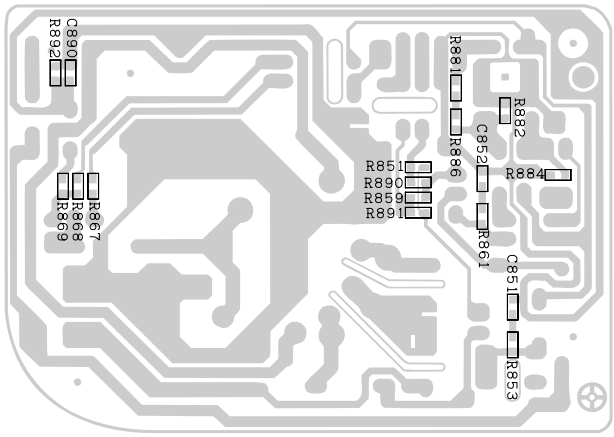

PWB-B: CRT Unit (Chip Parts Side)

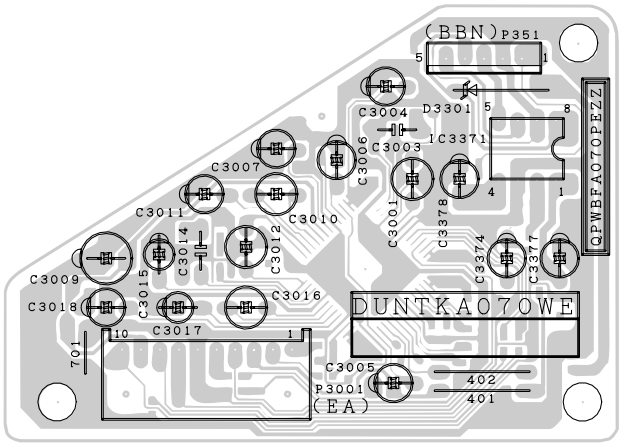

PWB-E: MTS MODULE Unit (Wiring Side)

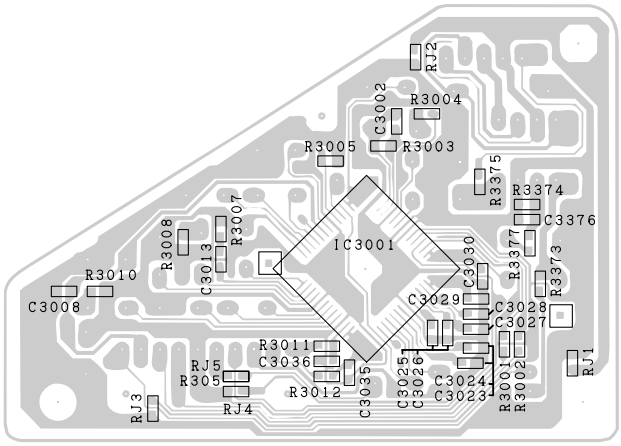

PWB-E: MTS MODULE Unit (Chip Parts Side)

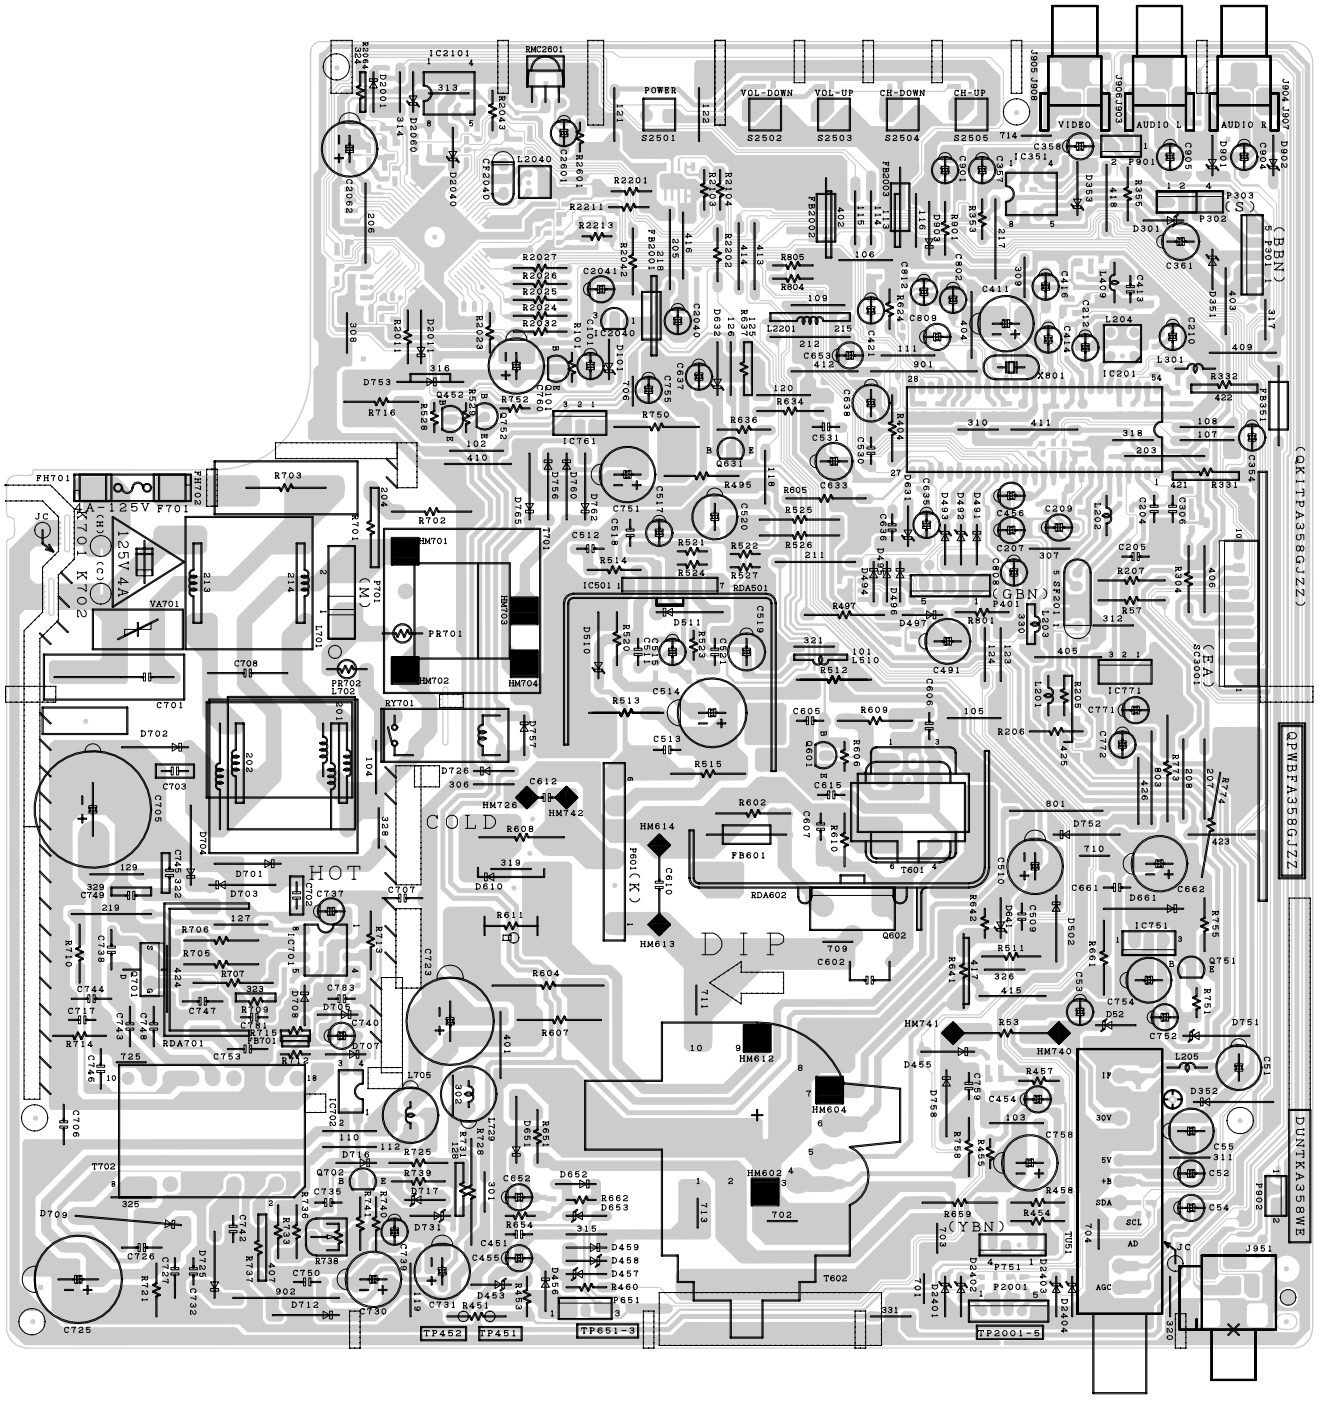

PWB-A: MAIN Unit (Wiring Side)

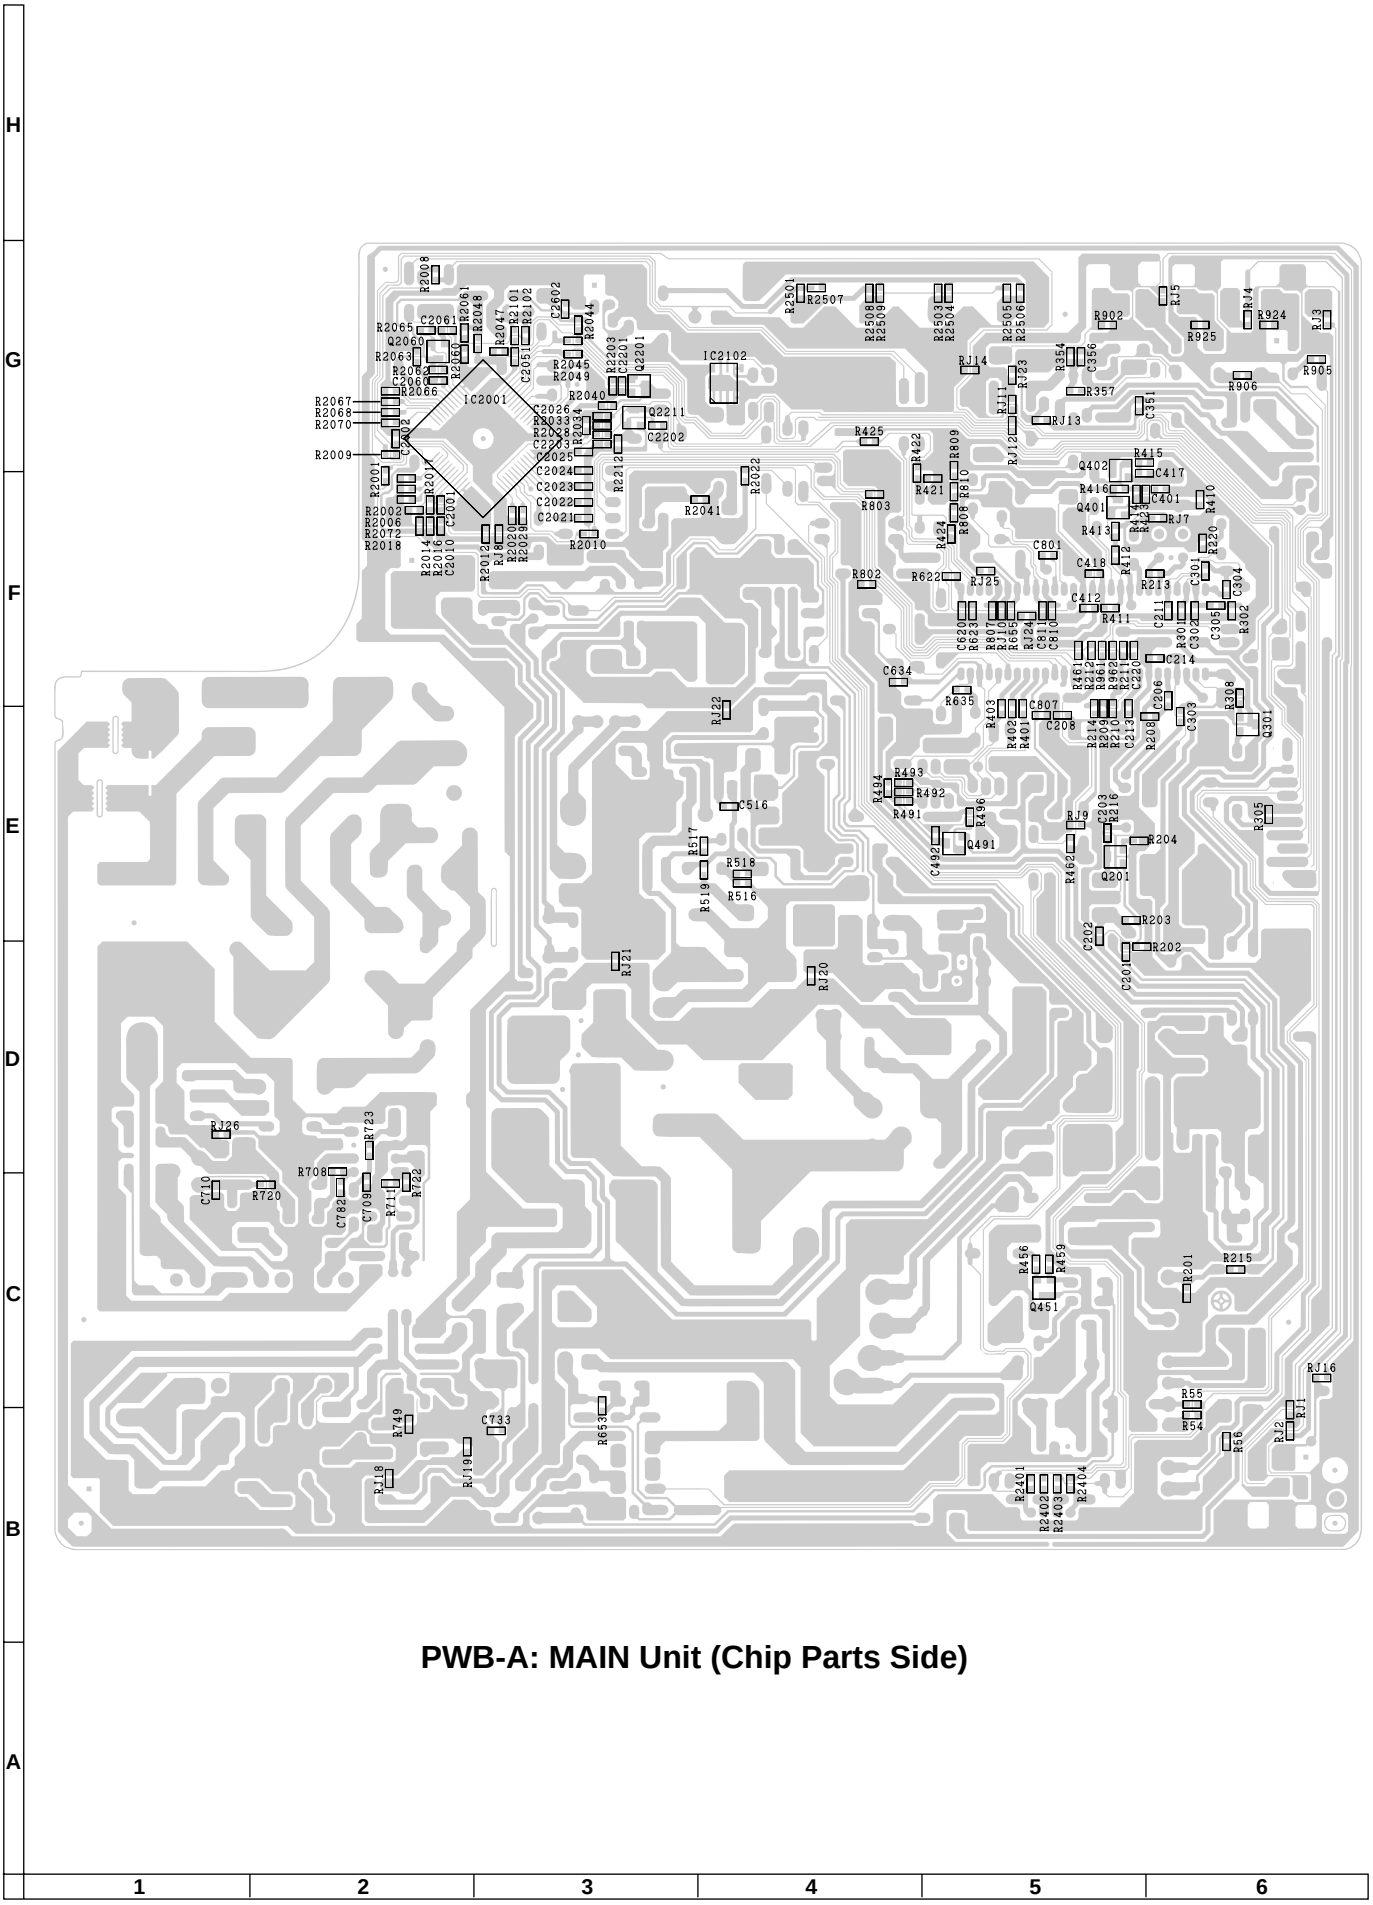

PWB-A: MAIN Unit (Chip Parts Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by ⚠ and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which dose no have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

in **USA**: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free; 1-800-BE-SHARP

★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X- RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code

PICTURE TUBE

▲⚠	V101	VB51KRE89X/3E	X	Picture Tube	BZ
▲⚠	DY601	RCiLH0107MEZZ	X	Deflection Yoke	AZ
⚠	L703	RCiLG0109GJZZ	X	Degaussing Coil	AQ
		or			
		RCiLG0017MEZZ			
		or			
		RCiLG0100PEZZ			
		LHLDW0102GJKZ	X	Wire Holder	AC
		LHLDW1007MEKZ	X	Wire Holder	AD
		PMAGF3046CEZZ	R	Purity Magnet	AF
		QEARC2119PEZZ	J	Grounding Strap	AG

PRINTED WIRING BOARD ASSEMBLIES
(NOT REPLACEMENT ITEM)

PWB-A	DUNTKA358WEW2	– MAIN Unit	—
PWB-B	DUNTKA359WEW2	– CRT Unit	—
PWB-E	DUNTKA070WEV2	– MTS MODULE Unit	—

Ref. No.	Part No.	★	Description	Code

PWB-A: DUNTKA358WEW2
MAIN UNIT

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY

⚠	TU51	VTUVTST5UF770	J	Tuner	AZ
		or			
		VTUENV56D82-1			

INTEGRATED CIRCUITS

▲⚠	IC201	RH-iX3354CEN1	X	I.C.	AS
		or			
		RH-iX3354CEZZ			

	COMBINATION	
IC201	RH-iX3354CEZZ	RH-iX3354CEN1
C211	VCKYCY1HB102K(1000p)	—
C301	VCCCCY1HH470J(47p)	VCCCCY1HH220J(22p)
C304	VCCCCY1HH470J(47p)	VCCCCY1HH220J(22p)
C802	—	VCEA0A1CW106M(10µ(16V))
R209	VRS-CY1JF123J(12k)	VRS-CY1JF000J(0)
R302	VRS-CY1JF332J(3.3k)	VRS-CY1JF152J(1.5k)
R413	VRS-CY1JF152J(1.5k)	VRS-CY1JF222J(2.2K)

	IC351	VHiAN7511//-1	J	AN7511	AK
⚠	IC501	VHiLA7840//-1	J	LA7840	AR
⚠	IC701	VHiTEA1507/-1	J	TEA1507P/N1	AL
⚠	IC702	RH-FX0034CEZZ	J	PC817	AE
⚠	IC751	VHiKA7809AP-1	J	KA7809API	AE
	IC771	VHiKA7805AP-1	J	KA7805API	AE
		or			
		VHiTA7805S/-1			
	IC2001	RH-iX3528CEZZQ	X	I.C.	AT
	IC2040	VHiPST994C/-1	J	PST994C	AD
	IC2102	VHiBR2416E2-1	J	BR24C16F	AK
		or			
		VHiM24C16B/-1	J	M24C16B (IC2101)	AG

TRANSISTORS

	Q101	VS2SC945AQ/-1	J	2SC945AQ	AB
		or			
		VS2SC3198-Y-1			
	Q201	VS2SC2735//1E	J	2SC2735	AC
	Q301	VS2SC3928R/-1	J	2SC3928R	AB
		or			
		VS2SD601AR/-1			
	Q451	VS2SA1530R/-1	J	2SA1530R	AB
	Q452	VS2SA1266-Y-1	J	2SA1266-Y	AA
	Q601	VS2SC2482//-1	J	2SC2482	AD
⚠	Q602	VS2SD2586//1E	J	2SD2586	AM
	Q631	VS2SC945AQ/-1	J	2SC945AQ	AB
		or			
		VS2SC3198-Y-1			
⚠	Q701	VSSPP04N60C-1	J	SPP04N60C	AH
		or			
		VSSPP07N60C			
		or			
		VS2SK2708//1E			
		or			
		VS2SK2645//-G			
		or			
		VSSTP60NC60FP			
		or			
		VSSTP7NB60F-1			
	Q702	VS2SC945AQ/-1	J	2SC945AQ	AB
		or			
		VS2SC3198-Y-1			
	Q752	VS2SC945AQ/-1	J	2SC945AQ	AB
		or			
		VS2SC3198-Y-1			
	Q2201	VS2SC3928R/-1	J	2SC3928R	AB
		or			
		VS2SD601AR/-1			
	Q2211	VS2SC3928R/-1	J	2SC3928R	AB

PWB-A: DUNTKA358WEW2
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description	Code
DIODES				
D52	RH-EX0676GEZZ	J	Zener Diode, 32V	AA
D101	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
D352	VHD1SS119//-1 or RH-DX0475CEZZ	J	Diode	AB
D353	RH-EX0644GEZZ	J	Zener Diode, 13V	AB
D453	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
D455	VHD1SS119//-1 or RH-DX0475CEZZ	J	Diode	AB
D456	VHD1SS119//-1 or RH-DX0475CEZZ	J	Diode	AB
D457	RH-EX0644GEZZ	J	Zener Diode, 13V	AB
D458	RH-EX0644GEZZ	J	Zener iode, 13V	AB
D459	VHD1SS119//-1 or RH-DX0475CEZZ	J	Diode	AB
D502	RH-DX0131CEZZ	J	Diode	AC
D511	RH-DX0441CEZZ	J	Diode	AC
D632	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA
D641	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA
⚠ D651	VHD1SS244//-1	J	Diode	AB
▲⚠ D653	RH-EX0667GEZZ	J	Zener Diode, 27V	AA
⚠ D661	RH-DX0468CEZZ or RH-DX0302CEZZ	J	Diode	AE
⚠ D701	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D702	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D703	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
⚠ D704	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC
D707	RH-DX0475CEZZ or VHD1SS244//-1	J	Diode	AB
D708	RH-DX0475CEZZ or VHD1SS244//-1	J	Diode	AB
⚠ D709	RH-DX0229CEZZ	J	Diode	AF
⚠ D712	VHDD1NS4///-1 or RH-DX0487CEZZ or RH-DX0302CEZZ or RH-DX0468CEZZ	J	Diode	AE
D717	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA
⚠ D725	RH-DX0131CEZZ	J	Diode	AC
D726	VHD1SS119//-1 or RH-DX0475CEZZ	J	Diode	AB
D753	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC
⚠ D758	RH-DX0131CEZZ	J	Diode	AC
⚠ VA701	RH-VX0048CEZZ or RH-VX0019CEZZ	J	Varistor	AE
PACKAGED CIRCUITS				
⚠ PR701	RMPTP0026CEZZ	J	Packaged Circuit	AF
X801	RCRSB0001PEZZ or RCRSB0205CEZZ	R	Crystal	AL

Ref. No.	Part No.	★	Description	Code
FILTERS AND COILS				
CF2040	RFiLA0099CEZZ or RFiLC0121GEZZ	J	Ceramic Filter	AE
L201	VP-XF1R2K0000	J	Peaking 1.2µH	AB
L202	VP-XF1R2K0000	J	Peaking 1.2µH	AB
L203	VP-XF220K0000	J	Peaking 22µH	AB
L204	RCiLi0632CEZZ	J	IF Coil	AE
L301	VP-XF150K0000	J	Peaking 15µH	AB
⚠ L701	RCiLF0078PEZZ or RCiLF0069PEZZ	R	Coil	AF
⚠ L705	RCiLP0179CEZZ	J	Coil	AD
L706	RCiLP0197CEZZ	J	Coil (JA301)	AE
L2040	RCiLB0131CEZZ	J	Oscillation Coil	AE
SF201	RFiLC0441CEZZ	J	SAW Filter	AH
TRANSFORMERS				
⚠ T601	RTRNZ0731CEZZ or RTRNZ0026PEZZ	J	Transformer	AG
▲⚠ T602	RTRNF0213PEZZ	R	H-Volt Transformer	AY
⚠ T702	RTRNW0003PEZZ or RTRNW0009PEZZ	R	Transformer	AM
CONTROL				
R738	RVR-M4588CEZZ+ or RVR-M4628GEZZ or RVR-M4336CEZZ	X	22k(B)130V Adj.	AE

CAPACITORS

[EL.··· Electrolytic, M-Poly.··· Metalized Polypro Film]

C51	VCEA0A1AW337M	X	330	10V	EL.	AE
C53	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C54	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C101	VCEA0A1CW476M	J	47	16V	EL.	AB
C201	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C202	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C203	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C204	VCQYTA1HM223K	J	0.022	50V	Mylar	AB
C205	VCKYPA1HB103K	J	0.01	50V	Ceramic	AA
C206	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C207	VCEA0A1CW476M	J	47	16V	EL.	AB
C208	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C209	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C210	VCEA0A1HW474M	J	0.47	50V	EL.	AB
C211	VCKYCY1HB102K	J	1000p (IC201:iX3354CEZZ)	50V	Ceramic	AA
C212	VCEA0A1HW474M	J	0.47	50V	EL.	AB
C220	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C301	VCCCCY1HH470J	J	47p (IC201:iX3354CEZZ)	50V	Ceramic	AA
C301	VCCCCY1HH220J	J	22p (IC201:iX3354CEN1)	50V	Ceramic	AA
C302	VCKYCY1HB102K	J	1000p	50V	Ceramic	AA
C304	VCCCCY1HH470J	J	47p (IC201:iX3354CEZZ)	50V	Ceramic	AA
C304	VCCCCY1HH220J	J	22p (IC201:iX3354CEN1)	50V	Ceramic	AA
C305	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C354	VCEA0A1HW225M	J	2.2	50V	EL.	AB
C356	VCKYCY1HB332K	J	3300p	50V	Ceramic	AA
C357	VCEA0A1HW106M	J	10	50V	EL.	AB
C358	VCEA0A1HW106M	J	10	50V	EL.	AB
C361	VCEA0A1CW477M	J	470	16V	EL.	AC
C401	VCCCCY1HH470J	J	47p	50V	Ceramic	AA
C411	VCEA0A1AW108M	J	1000	10V	EL.	AC
C412	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C414	VCEA0A1HW225M	J	2.2	50V	EL.	AB
C416	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C418	VCKYCY1HB103K	J	0.01	50V	Ceramic	AA
C421	VCEA0A1HW106M	J	10	50V	EL.	AB

PWB-A: DUNTKA358WEW2

MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description			Code
C451	VCQYTA1HM563K	J	0.056	50V	Mylar	AB
C454	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C455	VCEA0A1CW226M+	J	22	16V	EL.	AB
C456	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C509	VCKYPA2HB102K	J	1000p	500V	Ceramic	AA
C510	VCEA0A1VW477M	J	470	35V	EL.	AB
C512	VCFYSA1JB224J	J	0.22	63V	Mylar	AF
C513	VCFYSA1JB473J	J	0.047	63V	Mylar	AC
C514	VCEA0A1EW477M	J	470	25V	EL.	AD
C515	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C516	VCKYCY1HB222K	J	2200p	50V	Ceramic	AA
C517	VCEA0A1CW226M	J	22	16V	EL.	AB
C520	VCEA0A1HW107M	J	100	50V	EL.	AB
C530	VCFYFA1HA334J	J	0.33	50V	Mylar	AB
C531	VCFYFA1HA564J	J	0.56	50V	Mylar	AB
C606	VCKYPA2HB561K	J	560p	500V	Ceramic	AA
C607	VCKYPA1HB472K	J	4700p	50V	Ceramic	AA
▲⚠ C610	VCFPVC3CA742H	X	7400p	1.6kV	M-Poly.	AD
C612	VCFPVC2DB564J	J	0.56	200V	M-Poly.	AF
C633	VCEA0A1AW337M	X	330	10V	EL.	AE
C634	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C635	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C636	VCQYTA1HM153K	J	0.015	50V	Mylar	AA
C637	VCEA0A1CW476M	J	47	16V	EL.	AB
C652	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C653	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C661	VCKYPA2HB152K	J	1500p	500V	Ceramic	AA
C662	VCEA0A1CW477M	J	470	16V	EL.	AC
⚠ C701	RC-FZ036SCEZZ	J	0.1	AC250V	Mylar	AC
	or					
	RC-FZ008SGEZZ					
	or					
	RC-FZ016SCEZZ					
	or					
	RC-FZ028SCEZZ					
	or					
	RC-FZ029CUMZZ					
C702	RC-KZ0029CEZZ	J	0.01	AC250V	Ceramic	AC
C703	RC-KZ0029CEZZ	J	0.01	AC250V	Ceramic	AC
⚠ C705	RC-EZ1022CEZZ	J	470	220V	EL.	AK
	or					
	RC-EZ0611CEZZ		330	200V	EL.	
	or					
	RC-EZ0631CEZZ		330	200V	EL.	
⚠ C706	RC-KZ0092GEZZ	J	0.0033	AC250V	Ceramic	AC
	or					
	RC-KZ021SCEZZ					
C717	VCKYPA2HB472K	J	4700p	500V	Ceramic	AB
⚠ C723	RC-EZ0638CEZZ	J	33	160V	EL.	AG
⚠ C725	RC-EZ0724CEZZ	J	100	160V	EL.	AG
C726	VCKYPH3DB561K	J	560p	2kV	Ceramic	AC
⚠ C727	VCKYPA2HB472K	J	4700p	500V	Ceramic	AB
⚠ C730	VCEA0A1CW108M	J	1000	16V	EL.	AD
⚠ C731	VCEA0A1EW107M	J	100	25V	EL.	AC
C732	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA
C735	VCCCPA1HH680J	J	68p	50V	Ceramic	AA
C737	VCEA0A1EW226M	J	22	25V	EL.	AB
C738	RC-KZ0040CEZZ	J	820p	2kV	Ceramic	AD
C739	VCEA0A1HW104M	J	0.1	50V	EL.	AB
C740	VCEA0A1EW476M	J	47	25V	EL.	AB
C743	VCKYPH3DB561K	J	560p	2kV	Ceramic	AC
C750	VCKYPA1HF103Z	J	0.01	50V	Ceramic	AA
C753	VCKYPH3DB561K	J	560p	2kV	Ceramic	AC
C754	VCEA0A1CW476M	J	47	16V	EL.	AB
C758	VCEA0A2EW106M	J	10	250V	EL.	AD
C759	VCKYPA2HB102K	J	1000p	500V	Ceramic	AA
C760	VCEA0A1CW108M	J	1000	16V	EL.	AD
C771	VCEA0A1CW476M	J	47	16V	EL.	AB
C772	VCEA0A1CW476M	J	47	16V	EL.	AB
C783	VCQYTA1HM103K	J	0.01	50V	Mylar	AB
C801	VCCCCY1HH180J	J	18p	50V	Ceramic	AA
C802	VCEA0A1CW106M	J	10	16V	EL.	AB
			(IC201:iX3354CEN1)			
C807	VCKYCY1EF104Z	J	0.1	25V	Ceramic	AA
C808	VCEA0A1CW106M	J	10	16V	EL.	AB
C811	VCKYCY1CB473K	J	0.047	16V	Ceramic	AA
C812	VCEA0A1HW474M	J	0.47	50V	EL.	AB
C901	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C904	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C905	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C2001	VCCCCY1HH101J	J	100p	50V	Ceramic	AA
C2002	VCCCCY1HH101J	J	100p	50V	Ceramic	AA
C2040	VCEA0A1AW107M	J	100	10V	EL.	AB
C2041	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C2060	VCKYCY1CB104K	J	0.1	16V	Ceramic	AB
C2061	VCKYCY1HB222K	J	2200p	50V	Ceramic	AA
C2062	VCEA0A1AW107M	J	100	10V	EL.	AB
C2201	VCKYCY1HB682K	J	6800p	50V	Ceramic	AA
C2202	VCCCCY1HH560J	J	56p	50V	Ceramic	AA
C2601	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C2602	VCCCCY1HH101J	J	100p	50V	Ceramic	AA

RESISTORS

[M-Ox.··· Metal Oxide, M-Film ··· Metal Film]

RJ2	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ3	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ4	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ5	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ7	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ8	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ9	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ10	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ12	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ16	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ18	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ19	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ20	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ21	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
⚠ R53	VRS-RG3LB223J	X	22k	3W	M-Ox.	AF
R54	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R55	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R56	VRS-CY1JF823J	J	82k	1/16W	M-Ox.	AA
R57	VRD-RA2BE563J	J	56k	1/8W	Carbon	AA
R101	VRD-RA2BE152J	J	1.5k	1/8W	Carbon	AA
R201	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA
R202	VRS-CY1JF122J	J	1.2k	1/16W	M-Ox.	AA
R203	VRS-CY1JF682J	J	6.8k	1/16W	M-Ox.	AA
R204	VRS-CY1JF270J	J	27	1/16W	M-Ox.	AA
R205	VRD-RA2BE680J	J	68	1/8W	Carbon	AA
R206	VRD-RA2EE151J	J	150	1/4W	Carbon	AA
R207	VRD-RA2BE123J	J	12k	1/8W	Carbon	AA
R208	VRS-CY1JF332J	J	3.3k	1/16W	M-Ox.	AA
R209	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
			(IC201:iX3354CEN1)			
R209	VRS-CY1JF123J	J	12k	1/16W	M-Ox.	AA
			(IC201:iX3354CEZZ)			
R210	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA
R211	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA
R212	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R215	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R220	VRS-CY1JF331J	J	330	1/16W	M-Ox.	AA
R301	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R302	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
			(IC201:iX3354CEN1)			
R302	VRS-CY1JF332J	J	3.3k	1/16W	M-Ox.	AA
			(IC201:iX3354CEZZ)			
R304	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA
R305	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
R308	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R353	VRD-RA2BE683J	J	68k	1/8W	Carbon	AA
R354	VRS-CY1JF822J	J	8.2k	1/16W	M-Ox.	AA
R355	VRD-RA2BE223J	J	22k	1/8W	Carbon	AA
R357	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R401	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R402	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R403	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA

PWB-A: DUNTKA358WEW2
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description			Code
R404	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA
R411	VRS-CY1JF684J	J	680k	1/16W	M-Ox.	AA
R412	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R413	VRS-CY1JF222J	J	2.2k	1/16W	M-Ox.	AA
			(IC201:iX3354CEN1)			
R413	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
			(IC201:iX3354CEZZ)			
R414	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R421	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
⚠ R451	VRS-RG2HC103J	J	10k	1/2W	M-Ox.	AA
R453	VRD-RA2BE152J	J	1.5k	1/8W	Carbon	AA
R454	VRD-RA2EE334J	J	330k	1/4W	Carbon	AA
R455	VRD-RA2BE392J	J	3.9k	1/8W	Carbon	AA
R456	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R457	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA
R458	VRD-RA2EE334J	J	330k	1/4W	Carbon	AA
R460	VRD-RA2BE152J	J	1.5k	1/8W	Carbon	AA
R461	VRS-CY1JF184J	J	180k	1/16W	M-Ox.	AA
R462	VRS-CY1JF273J	J	27k	1/16W	M-Ox.	AA
R512	VRD-RM2HD102J	J	1.0k	1/2W	Carbon	AA
R513	VRD-RM2HD102J	J	1.0k	1/2W	Carbon	AA
R514	VRD-RM2HD1R0J	J	1.0	1/2W	Carbon	AA
R515	VRS-RG3AB391J	X	390	1W	M-Ox.	AE
R516	VRS-CY1JF153J	J	15k	1/16W	M-Ox.	AA
R517	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R518	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R519	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R520	VRD-RM2HD1R2J	J	1.2	1/2W	Carbon	AA
R522	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA
R523	VRD-RA2BE562J	J	5.6k	1/8W	Carbon	AA
R525	VRD-RA2BE272J	J	2.7k	1/8W	Carbon	AA
R528	VRD-RA2BE272J	J	2.7k	1/8W	Carbon	AA
R529	VRD-RA2BE472J	J	4.7k	1/8W	Carbon	AA
⚠ R604	VRS-RG3DB682J	X	6.8k	2W	M-Ox.	AE
R605	VRD-RA2BE121J	J	120	1/8W	Carbon	AA
R606	VRD-RA2BE102J	J	1.0k	1/8W	Carbon	AA
⚠ R607	VRS-RG3DB682J	X	6.8k	2W	M-Ox.	AE
⚠ R608	VRS-RG3DB391J	X	390	2W	M-Ox.	AE
⚠ R609	VRS-RG3AB562J	X	5.6k	1W	M-Ox.	AE
R610	VRD-RM2HD220J	J	22	1/2W	Carbon	AA
⚠ R611	VRS-KA3HG3R3K	J	3.3	5W	M-Ox.	AD
R622	VRS-CY1JF222J	J	2.2k	1/16W	M-Ox.	AA
R623	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R624	VRN-RA2BK472F	J	4.7k	1/8W	M-Film	AA
R634	VRD-RM2HD121J	J	120	1/2W	Carbon	AA
R635	VRS-CY1JF332J	J	3.3k	1/16W	M-Ox.	AA
R636	VRD-RA2EE221J	J	220	1/4W	Carbon	AA
⚠ R641	VRS-RG3AB682J	J	6.8k	1W	M-Ox.	AE
▲⚠ R651	VRD-RM2HD270J	J	27	1/2W	Carbon	AA
⚠ R653	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
▲⚠ R654	VRD-RA2BE154J	J	150k	1/8W	Carbon	AA
▲⚠ R655	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
⚠ R659	VRN-RL3AB1R2J	X	1.2	1W	M-Film	AE
⚠ R661	VRN-RL3ABR47J	X	0.47	1W	M-Film	AE
▲⚠ R662	VRD-RA2BE103G	J	10k	1/8W	Carbon	AA
⚠ R702	RR-DZ0049CEZZ	J	3.9M	1/2W	Solid	AB
⚠ R703	VRW-KP3HC1R8K	J	1.8	5W	Cement	AC
R705	VRN-RL3ABR39J	X	0.39	1W	M-Film	AE
R706	VRN-RL3ABR39J	X	0.39	1W	M-Film	AE
R707	VRD-RM2HD270J	J	27	1/2W	Carbon	AA
R708	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R710	VRS-RG2HC102J	J	1.0k	1/2W	M-Ox.	AA
R711	VRS-CY1JF334J	J	330k	1/16W	M-Ox.	AA
R712	VRD-RA2BE100J	J	10	1/8W	Carbon	AA
R713	VRS-RG2HC122J+	X	1.2k	1/2W	M-Ox.	AE
R715	VRD-RA2BE150J	J	15	1/8W	Carbon	AA
R716	VRS-RG3AB121J	X	120	1W	M-Ox.	AE
R721	VRD-RM2HD124J	J	120k	1/2W	Carbon	AA
R723	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R725	VRS-RG2HC821J	X	820	1/2W	M-Ox.	AE
R733	VRD-RA2EE394J	J	390k	1/4W	Carbon	AA
R736	VRD-RM2HD184J	J	180k	1/2W	Carbon	AA
⚠ R737	VRN-VV3ABR39J	J	0.39	1W	M-Film	AA
R739	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R740	VRD-RM2HD470J	J	47	1/2W	Carbon	AA
R741	VRN-RA2BK682F	J	6.8k	1/8W	M-Film	AA
R752	VRD-RA2BE562J	J	5.6k	1/8W	Carbon	AA
R755	VRD-RM2HD151J	J	150	1/2W	Carbon	AA
⚠ R758	VRS-RG2HC180J	X	18	1/2W	M-Ox.	AE
⚠ R773	VRS-RG3LB270J	X	27	3W	M-Ox.	AF
⚠ R774	VRS-VU3LE680J	J	68	3W	M-Ox.	AC
R801	VRD-RM2HD470J	J	47	1/2W	Carbon	AA
R807	VRS-CY1JF272J	J	2.7k	1/16W	M-Ox.	AA
R808	VRS-CY1JF272J	J	2.7k	1/16W	M-Ox.	AA
R809	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R810	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R901	VRD-RA2BE101J	J	100	1/8W	Carbon	AB
R902	VRS-CY1JF750J	J	75	1/16W	M-Ox.	AA
R905	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R906	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R924	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA
R925	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA
R961	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R962	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R2001	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R2002	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2006	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2008	VRS-CY1JF472J	J	4.7k	1/16W	M-Ox.	AA
R2009	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R2010	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R2012	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2016	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R2018	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2020	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R2022	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R2023	VRD-RA2BE223J	J	22k	1/8W	Carbon	AA
R2024	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA
R2025	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA
R2026	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA
R2027	VRD-RA2BE682J	J	6.8k	1/8W	Carbon	AA
R2028	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R2029	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2032	VRD-RA2BE471J	J	470	1/8W	Carbon	AA
R2033	VRS-CY1JF684J	J	680k	1/16W	M-Ox.	AA
R2034	VRS-CY1JF684J	J	680k	1/16W	M-Ox.	AA
R2040	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R2041	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R2042	VRD-RA2BE101J	J	100	1/8W	Carbon	AB
R2043	VRD-RA2BE101J	J	100	1/8W	Carbon	AB
R2044	VRS-CY1JF683J	J	68k	1/16W	M-Ox.	AA
R2045	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R2047	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA
R2048	VRS-CY1JF562J	J	5.6k	1/16W	M-Ox.	AA
R2049	VRS-CY1JF333J	J	33k	1/16W	M-Ox.	AA
R2060	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA
R2061	VRS-CY1JF562J	J	5.6k	1/16W	M-Ox.	AA
R2062	VRS-CY1JF183J	J	18k	1/16W	M-Ox.	AA
R2063	VRS-CY1JF222J	J	2.2k	1/16W	M-Ox.	AA
R2065	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R2066	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2067	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2068	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2070	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2072	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA
R2103	VRD-RA2BE101J	J	100	1/8W	Carbon	AB
R2104	VRD-RA2BE101J	J	100	1/8W	Carbon	AB
R2201	VRD-RA2BE103J	J	10k	1/8W	Carbon	AA
R2202	VRD-RA2BE473J	J	47k	1/8W	Carbon	AA
R2203	VRS-CY1JF332J	J	3.3k	1/16W	M-Ox.	AA
R2211	VRD-RA2BE222J	J	2.2k	1/8W	Carbon	AA
R2212	VRS-CY1JF682J	J	6.8k	1/16W	M-Ox.	AA
R2213	VRD-RA2BE223J	J	22k	1/8W	Carbon	AA
R2401	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R2402	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R2403	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA
R2404	VRS-CY1JF101J	J	100	1/16W	M-Ox.	AA

PWB-A: DUNTKA358WEW2
MAIN UNIT (Continued)

Ref. No.	Part No.	★	Description				Code
R2501	VRS-CY1JF123J	J	12k	1/16W	M-Ox.		AA
R2503	VRS-CY1JF273J	J	27k	1/16W	M-Ox.		AA
R2504	VRS-CY1JF123J	J	12k	1/16W	M-Ox.		AA
R2505	VRS-CY1JF563J	J	56k	1/16W	M-Ox.		AA
R2506	VRS-CY1JF563J	J	56k	1/16W	M-Ox.		AA
R2507	VRS-CY1JF823J	J	82k	1/16W	M-Ox.		AA
R2508	VRS-CY1JF153J	J	15k	1/16W	M-Ox.		AA
R2509	VRS-CY1JF272J	J	2.7k	1/16W	M-Ox.		AA
R2601	VRD-RA2BE331J	J	330	1/8W	Carbon		AA

SWITCHES

S2501	QSW-K0202PEZZ	R	Power	AC
	or			
	QSW-K0079GEZZ			
S2502	QSW-K0202PEZZ	R	VOL-Down	AC
	or			
	QSW-K0079GEZZ			
S2503	QSW-K0202PEZZ	R	VOL-Up	AC
	or			
	QSW-K0079GEZZ			
S2504	QSW-K0202PEZZ	R	CH-Down	AC
	or			
	QSW-K0079GEZZ			
S2505	QSW-K0202PEZZ	R	CH-Up	AC
	or			
	QSW-K0079GEZZ			

MISCELLANEOUS PARTS

⚠ F701	QFS-B4023CEZZ	J	Fuse 4A/125V	AC
	or			
	QFS-B4021GEZZ			
FB351	RBLN-0091GEZZ	X	Ferrite Bead	AC
FB601	RBLN-0047CEZZ	J	Ferrite Bead	AB
FB2002	RBLN-0091GEZZ	X	Ferrite Bead	AC
FH701	QFSHD1013CEZZ	J	Fuse Holder	AC
FH702	QFSHD1014CEZZ	J	Fuse Holder	AC
J906	QJAKE0202CE09	X	Jack, Audio-In(L)	
	or			
	QJAKE0156CEZZ			
J907	QJAKE0202CE02	J	Jack, Audio-In(R)	AD
	or			
	QJAKE0157CEZZ			
J908	QJAKE0202CE04	X	Jack, Video-In	
	or			
	QJAKE0155CEZZ			
J951	QJAKG0033CEZZ	J	Jack, Rear AV-In	AL
P301	QPLGN0561CEZZ	J	Plug, 5-pin(BBN)	AB
P303	QPLGN0461CEZZ	J	Plug, 4-pin(S)	AB
P401	QPLGN0561CEZZ	J	Plug, 5-pin(GBN)	AB
P601	QPLGN0660CEZZ	J	Plug, 6-pin(K)	AC
P651	QPLGN0361CEZZ	J	Plug, 3-pin(TP651-3)	AB
P701	QPLGN0260CEZZ	J	Plug, 2-pin(M)	AC
P751	QPLGN0461CEZZ	J	Plug, 4-pin(YBN)	AB
P2001	QPLGN0561CEZZ	J	Plug, 5-pin(TP2001-5)	AB
SC3001	QSOCN0259FJ00	J	Socket, 10-pin(EA)	AE
RMC2601	RRMCU0252CEZZ	X	R/C Receiver	AH
	or			
	RRMCU0232CEZZ			
HM602	LX-GZ3001PEZZ	J	Screw	AB
HM604	LX-GZ3001PEZZ	J	Screw	AB
HM612	LX-GZ3001PEZZ	J	Screw	AB
HM613	LX-GZ3002PEZZ	J	Screw	AB
HM614	LX-GZ3002PEZZ	J	Screw	AB
HM726	LX-GZ3002PEZZ	J	Screw	AB
HM740	LX-GZ3002PEZZ	J	Screw	AB
HM741	LX-GZ3002PEZZ	J	Screw	AB
HM742	LX-GZ3002PEZZ	J	Screw	AB
RDA501	PRDAR0297PEFW	R	Heat Sink, for IC501	AD
RDA602	PRDAR0216PEFW	R	Heat Sink, for Q602	AE
RDA701	PRDAR0026PEFW	R	Heat Sink, for Q701	AD
	LX-BZ3100CEFD	J	Screw	AA

PWB-B: DUNTKA359WEW2
CRT UNIT

TRANSISTORS

Q852	VSBF422////-1	J	BF422	AC
	or			
	VS2SC2229O/1E			
Q854	VSBF422////-1	J	BF422	AC
	or			
	VS2SC2229O/1E			
Q856	VSBF422////-1	J	BF422	AC
	or			
	VS2SC2229O/1E			
Q881	VS2SA1266-Y-1	J	2SA1266-Y	AA
	or			
	VS2SA1015-Y-1			

DIODES

D882	RH-DX0475CEZZ	J	Diode	AB
D885	RH-DX0475CEZZ	J	Diode	AB

COIL

L852	VP-MK820K0000	J	Peaking 82µH	AB

CAPACITORS

[EL.··· Electrolytic]

C851	VCCCCY1HH151J	J	150p	50V	Ceramic	AA
C852	VCCCCY1HH151J	J	150p	50V	Ceramic	AA
C853	VCCSPA1HL151J	J	150p	50V	Ceramic	AA
C854	RC-KZ0029CEZZ	J	0.01	1kV	Ceramic	AC
	or					
	RC-KZ0016GEZZ					
C883	VCEA0A1CW336M	J	33	16V	EL.	AB

RESISTORS

[M-Ox.··· Metal Oxide]

R851	VRS-CY1JF470J	J	47	1/16W	M-Ox.	AA
R852	VRD-RA2BE181J	J	180	1/8W	Carbon	AA
R853	VRS-CY1JF121J	J	120	1/16W	M-Ox.	AA
⚠ R857	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R858	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R859	VRS-CY1JF470J	J	47	1/16W	M-Ox.	AA
R860	VRD-RA2BE181J	J	180	1/8W	Carbon	AA
R861	VRS-CY1JF121J	J	120	1/16W	M-Ox.	AA
⚠ R865	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R866	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R867	VRS-CY1JF470J	J	47	1/16W	M-Ox.	AA
R868	VRS-CY1JF181J	J	180	1/16W	M-Ox.	AA
R869	VRS-CY1JF121J	J	120	1/16W	M-Ox.	AA
⚠ R873	VRS-VU3AE123J	J	12k	1W	M-Ox.	AB
R874	VRD-RM2HD332J	J	3.3k	1/2W	Carbon	AA
R881	VRS-CY1JF561J	J	560	1/16W	M-Ox.	AA
R882	VRS-CY1JF391J	J	390	1/16W	M-Ox.	AA
R883	VRD-RA2BE561J	J	560	1/8W	Carbon	AA
R884	VRS-CY1JF152J	J	1.5k	1/16W	M-Ox.	AA
R886	VRS-CY1JF821J	J	820	1/16W	M-Ox.	AA
R887	VRD-RA2BE470J	J	47	1/8W	Carbon	AA

MISCELLANEOUS PARTS

P851	QPLGN0561CEZZ	J	Plug, 5-pin(GBN)	AB
P852	QPLGN0461CEZZ	J	Plug, 4-pin(YBN)	AB
SC851	QSOCV0016PEZZ	X	CRT Socket	
	or			
	QSOCV0933CEZZ			

Ref. No.	Part No.	★	Description	Code

PWB-E : DUNTKA070WEV2
MTS MODULE UNIT

INTEGRATED CIRCUITS

IC3001	VHiCXA2074Q-1	J	CXA2074Q	AY
IC3371	VHiAN7511//-1	J	AN7511	AK

DIODES

D3301	RH-EX0643GEZZ	J	Zener Diode, 13V	AB

CAPACITORS

[EL.··· Electrolytic]

C3001	VCE9GA1HW475M	J	4.7	50V	EL. (N.P)	AB
C3002	VCKYCY1HB562K	J	5600p	50V	Ceramic	AA
C3003	VCQYTA1HM123K	J	0.012	50V	Mylar	AA
C3004	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C3005	VCEA9A1HW475M	J	4.7	50V	EL.	AB
C3006	VCEA0A1HW106M	J	10	50V	EL.	AB
C3007	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C3008	VCKYCY1HF103Z	J	0.01	50V	Ceramic	AA
C3009	VCEA0A1CW227M	J	220	16V	EL.	AC
C3010	VCE9GA1HW475M	J	4.7	50V	EL. (N.P)	AB
C3011	VCEA0A1HW475M	J	4.7	50V	EL.	AB
C3012	VCE9GA1HW475M	J	4.7	50V	EL. (N.P)	AB
C3013	VCKYCY1HB272K	J	2700p	50V	Ceramic	AA
C3014	VCQYTA1HM473K	J	0.047	50V	Mylar	AB
C3015	VCEACA1HC335K	X	3.3	50V	EL.	AF
C3016	VCE9GA1HW475M	J	4.7	50V	EL. (N.P)	AB
C3017	VCEACA1CC106K	J	10	16V	EL.	AC
C3018	VCEA0A1HW105M	J	1.0	50V	EL.	AB
C3374	VCEA0A1HW225M	J	2.2	50V	EL.	AB
C3376	VCKYCY1HB332K	J	3300p	50V	Ceramic	AA
C3377	VCEA0A1HW106M	J	10	50V	EL.	AB
C3378	VCEA0A1HW106M	J	10	50V	EL.	AB

RESISTORS

[M-Ox.··· Metal Oxide]

RJ3	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
RJ5	VRS-CY1JF000J	J	0	1/16W	M-Ox.	AA
R3001	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA
R3002	VRS-CY1JF221J	J	220	1/16W	M-Ox.	AA
R3003	VRS-CY1JF105J	J	1.0M	1/16W	M-Ox.	AA
R3004	VRS-CY1JF104J	J	100k	1/16W	M-Ox.	AA
R3005	VRS-CY1JF623J	J	62k	1/16W	M-Ox.	AA
R3007	VRS-CY1JF332J	J	3.3k	1/16W	M-Ox.	AA
R3008	VRS-CY1JF302J	J	3.0k	1/16W	M-Ox.	AA
R3010	VRS-CY1JF392J	J	3.9k	1/16W	M-Ox.	AA
R3011	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R3012	VRS-CY1JF102J	J	1.0k	1/16W	M-Ox.	AA
R3373	VRS-CY1JF683J	J	68k	1/16W	M-Ox.	AA
R3374	VRS-CY1JF822J	J	8.2k	1/16W	M-Ox.	AA
R3375	VRS-CY1JF223J	J	22k	1/16W	M-Ox.	AA
R3377	VRS-CY1JF103J	J	10k	1/16W	M-Ox.	AA

MISCELLANOUS PARTS

P351	QPLGN0561CEZZ	J	Plug, 5-pin(BBN)	AB
P3001	QPLGN0242FJ00	J	Plug, 10-pinEA)	AE

MISCELLANEOUS PARTS

Ref. No.	Part No.	★	Description	Code
⚠ ACC701	QACCD3064CESA	J	AC Cord	AM
	or			
	QACCD3060CESA			
	or			
	QACCD3090CESA			
SP1	VSP0080PBP7YA	X	Speaker(L), 32 ohm	AL
SP2	VSP0080PBP7YA	X	Speaker(R), 32 ohm	AL
	LHLDK0014PEZZ	J	AC Cord Holder	AD
	TCAUS3000GJZZ	X	Caution Card	AB
	TLABM0002GJZZ	X	Label	AB
	TLABZ0109GJZZ	X	Label	AB
	QCNW-0114GJZZ	X	Connecting Cord	AG
	QCNW-2111PEZZ	J	Connecting Cord	AF
	QCNW-2160PEZZ	J	Connecting Cord	AG
	QCNW-2208PEZZ	J	Connecting Cord	AF

SUPPLIED ACCESORRIES

Part No.	★	Description	Code
TGAN-0001GJZZ	X	Guarantee Card	AB
TiNS-7346GJZZ	X	Operation Manual	AF
RRMCG1626CESA	X	Infrared R/C Unit	AV

PACKING PARTS
(NOT REPLACEMENT ITEM)

Part No.	★	Description	Code
SPAKC0203GJZZ	–	Packing Case	—
SPAKP0102GJZZ	–	Wrapping Paper	—
SPAKX0004GJZZ	–	Buffer Material	—
SSAKA0101GJZZ	–	Polyethylene Bag	—

CABINET PARTS

Ref. No.	Part No.	★	Description	Code
1	CCABA0109WEH2	X	Front Cabinet Ass'y	
1-1	*Not Available*	–	Front Cabinet	—
1-2	GCOVA0004GJSA	X	Cover for R/C	AG
1-3	HBDGB1001GJSB	X	Badge, "SHARP"	AF
1-4	JBTN-0004GJSA	X	Button(Power, Vol-up/down, CH-up/down)	AH
2	GCABB0110GJKA	X	Rear Cabinet	

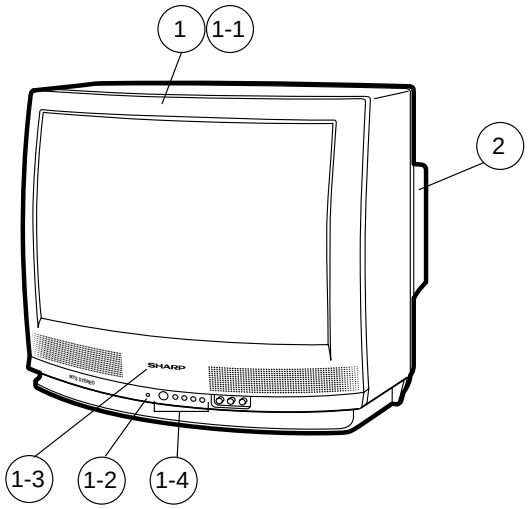

PACKING OF THE SET

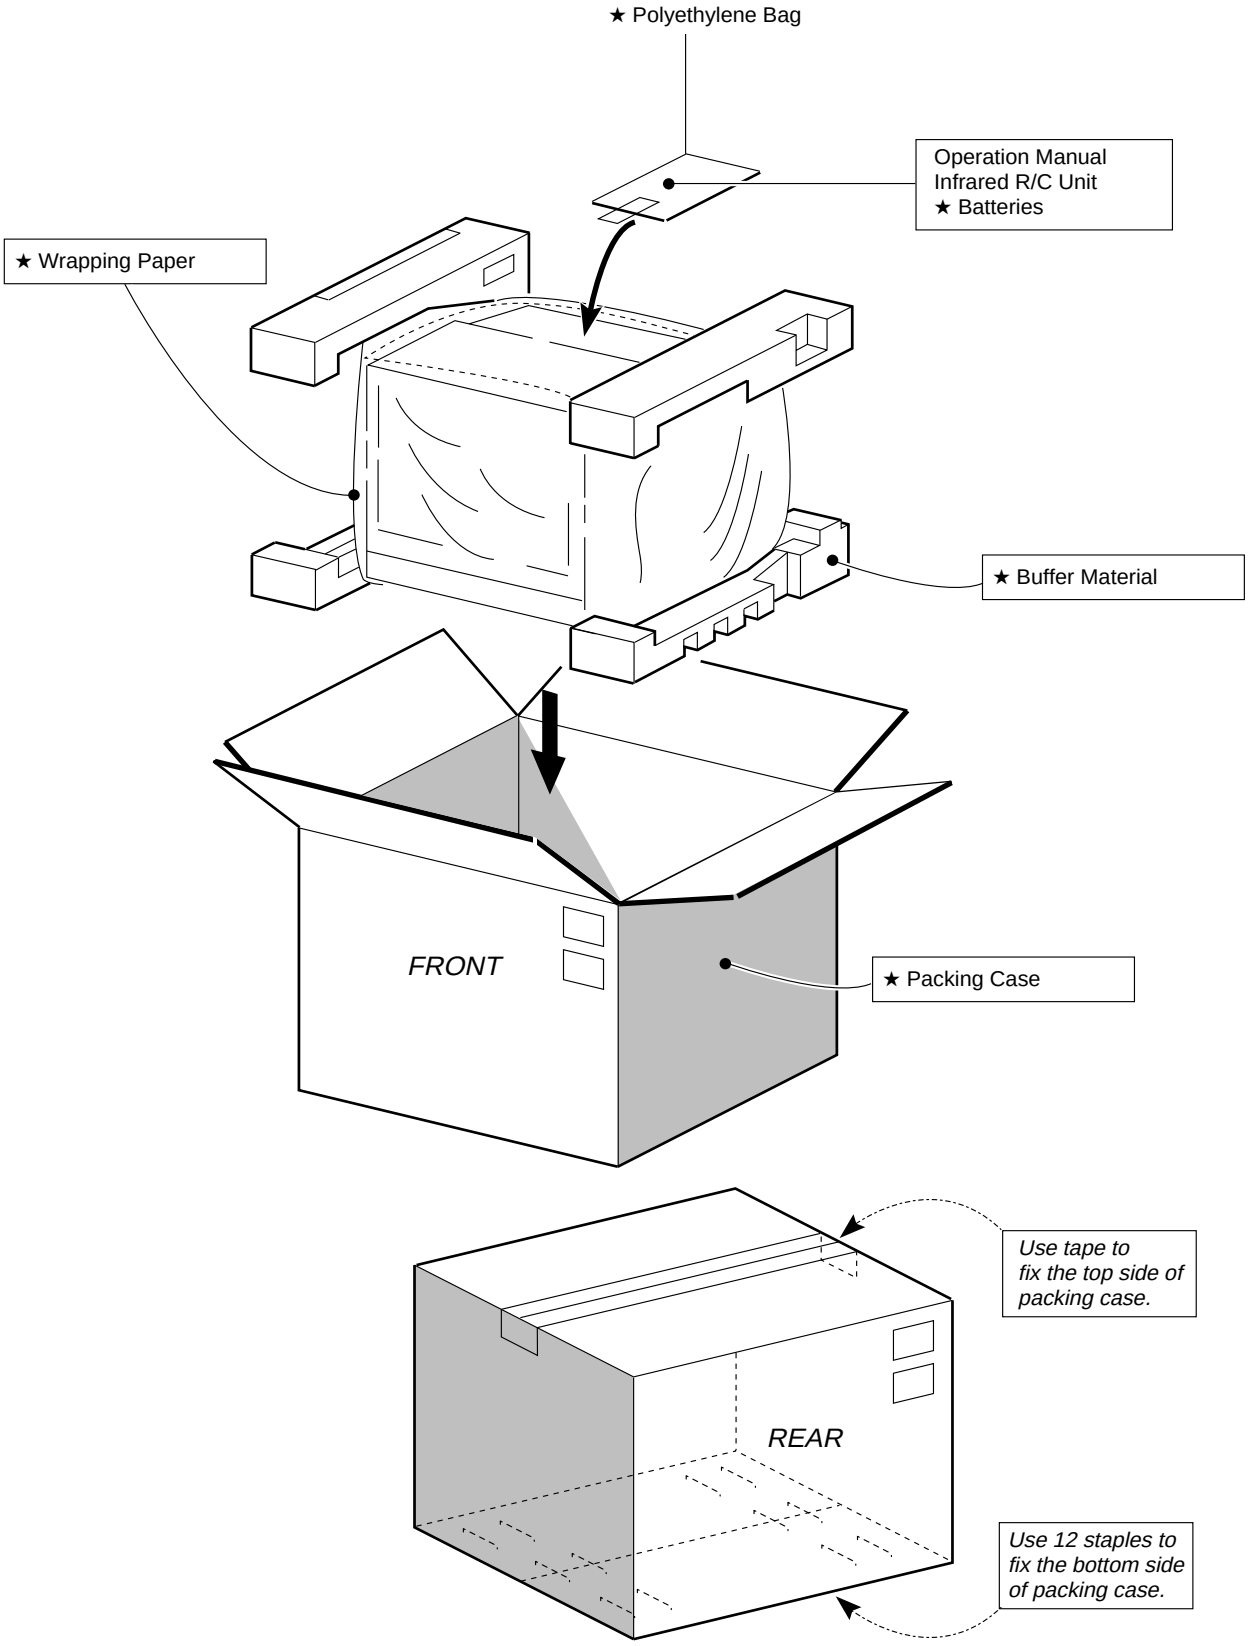

★ MARK : Not Replacement Items.

SHARP

COPYRIGHT © 2001 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

Ⓓ SEM Ⓟ SEMEX TQ1077-S
Feb. 2001 Printed in Japan
MI. KG

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan